

Cub Cadet[®]

 
ILLUSTRATED PARTS MANUAL

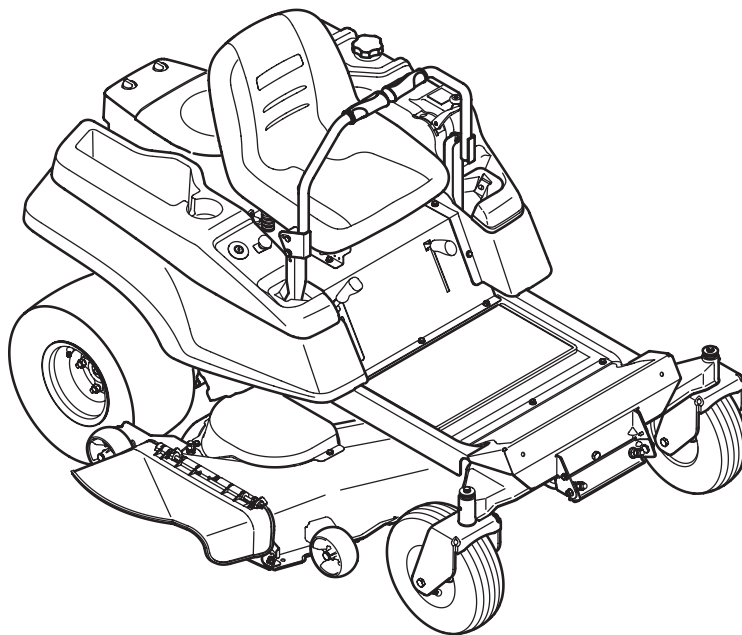


50" RZT VT Series Tractor

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

Frame & Drive Idler Assembly

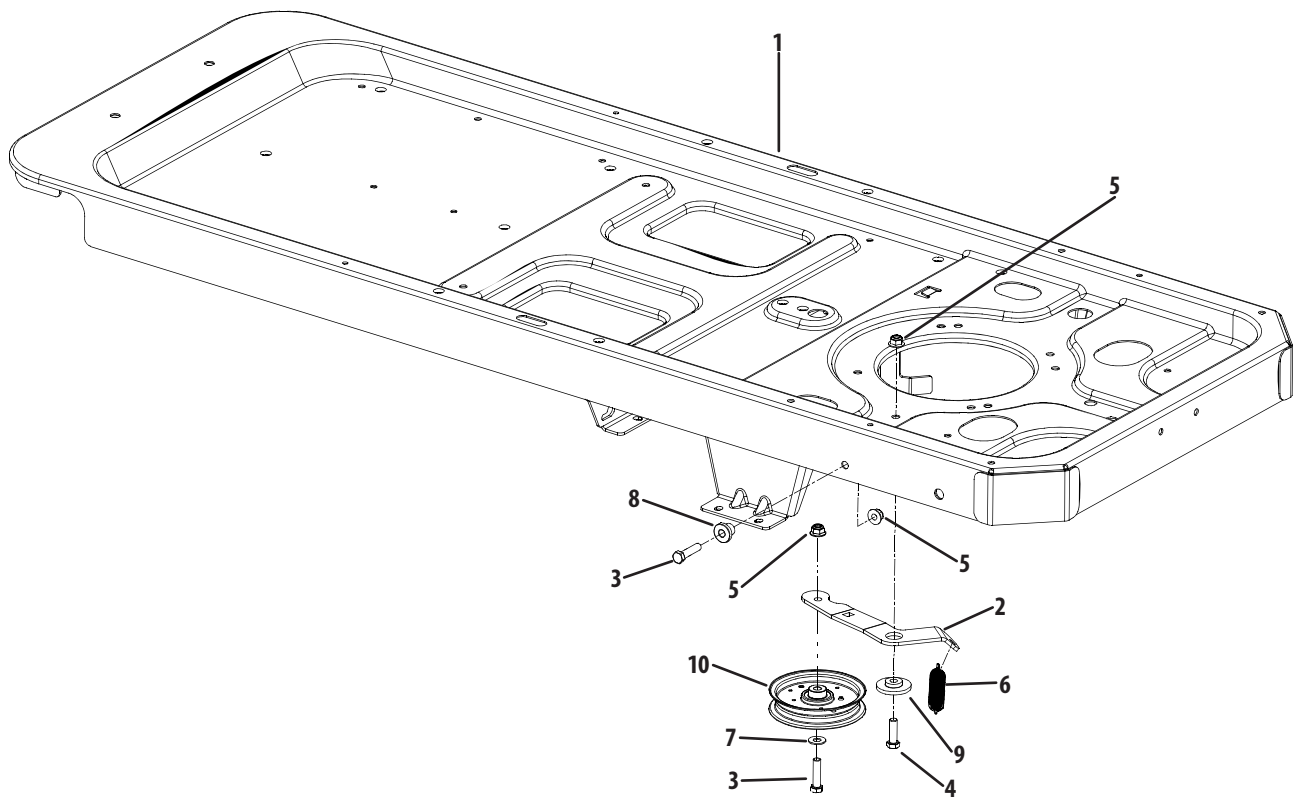


Ref.	Part Number	Description
1.	603-04691-4021	Frame Assembly
2.	703-05829-0637	Drive Idler Arm
3.	710-0520	Hex Screw, $\frac{3}{8}$ -16 x 1.5
4.	710-3005	Hex Screw, $\frac{3}{8}$ -16 x 1.25
5.	712-04065	Flange Nut, $\frac{3}{8}$ -16
6.	732-0626	Extension Spring, .75 x 5.06
7.	936-0300	Flat Washer, .408 x .875 x .059
8.	738-04058	Shoulder Spacer, .39 x 1.0 x .7
9.	738-04162A	Shoulder Spacer, .884 x .19
10.	756-04129	Idler Pulley, 4.25 Dia.

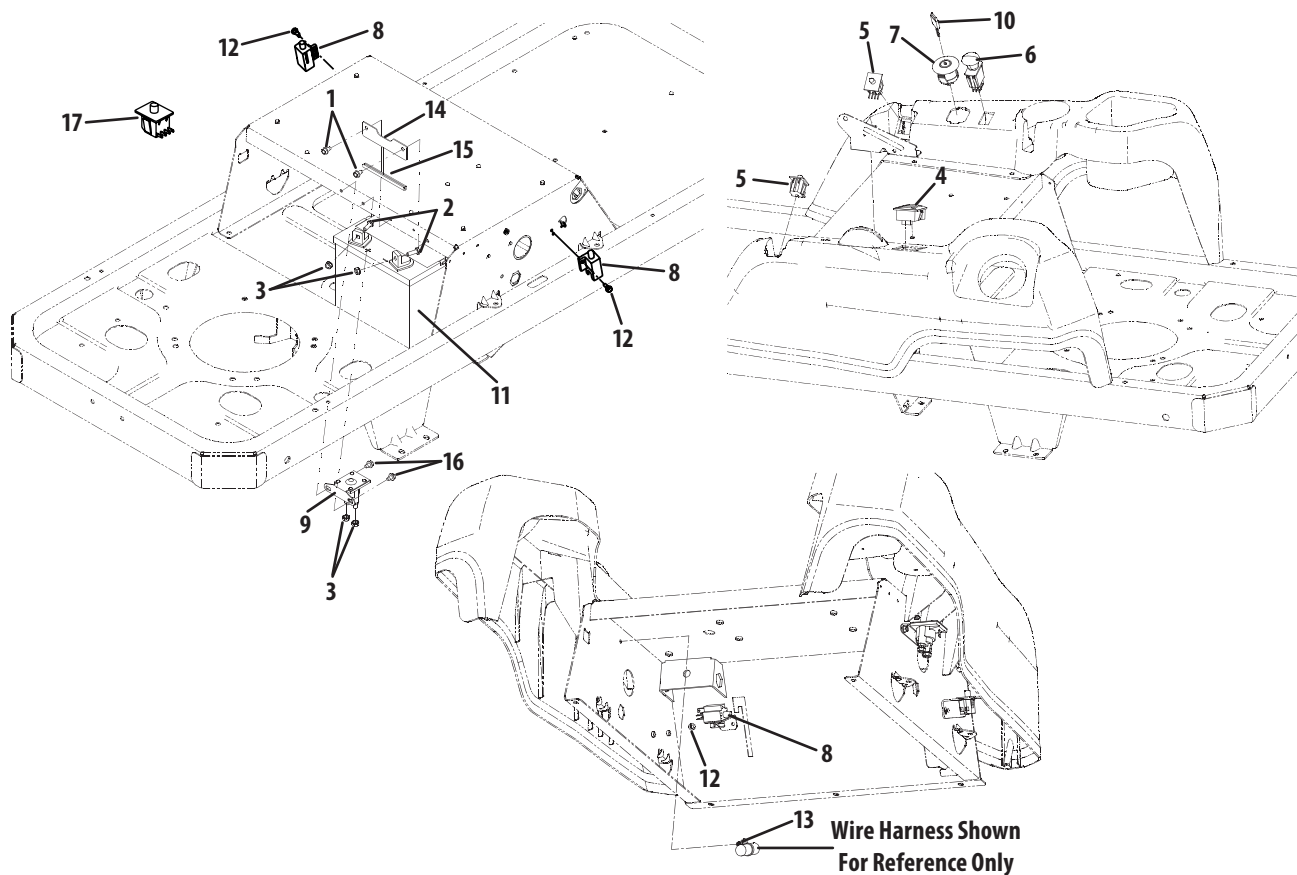 

Ref.	Part Number	Description
1.	710-0599	Hex Screw, ¼-20 x .5
2.	710-3015	Hex Screw, ¼-20 x .75
3.	712-0271	Hex Nut, ¼-20
4.	925-04022B	Hour Meter
5.	925-04165	Double Pole — Neutral Switch
6.	925-04174	PTO Switch
7.	925-04228	Ignition Switch
8.	725-04363	Interlock Switch
9.	725-04439	Solenoid


Ref.	Part Number	Description
10.	925-1745	Key
11.	925-1707D	Battery
12.	738-04237A	Shoulder Screw, #10-32 x .500
13.	726-0470	Cable Tie
14.	703-05894-0637	Batter Hold-down
15.	731-0511	Trim Strip
16.	710-0653	Hex Screw, ¼-20 x .375
17.	925-04040	Seat Switch

 Operator's Platform

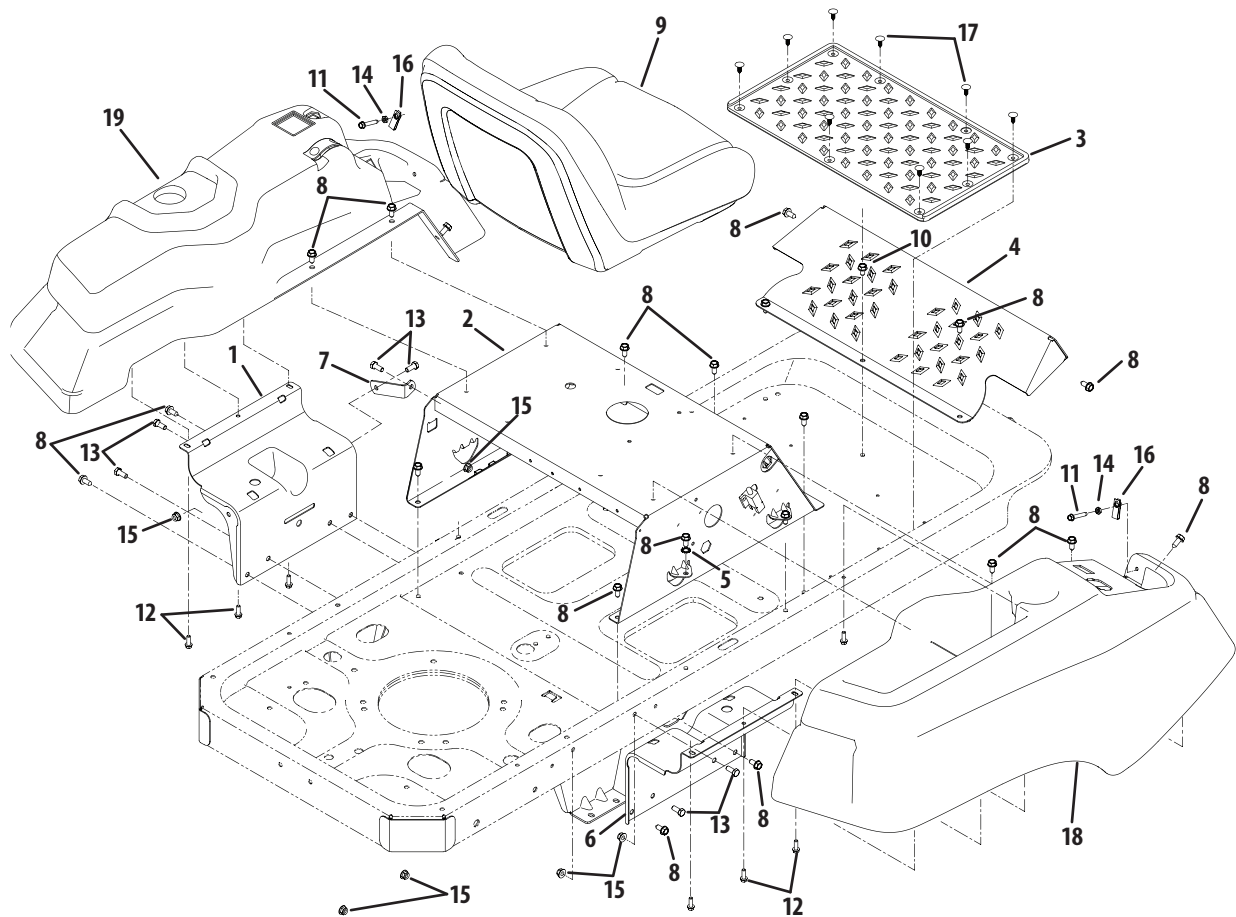

Ref.	Part Number	Description
1.	603-04564-4021	Console Mount Bracket
2.	603-04663-4021	Seat Frame
3.	735-04082B	Foot Pad
4.	703-05373B-4021	Foot Rest
5.	736-0148	Lock Washer, $\frac{3}{8}$
6.	703-06451-4021	Console Mount Bracket
7.	703-06623-0637	Fuel Tank Support Bracket
8.	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
9.	757-04098	High-Back Seat
10.	710-0604A	Hex Washer Screw, $\frac{5}{16}$ -18 x .825


Ref.	Part Number	Description
11.	710-0778	Hex Washer Screw, $\frac{1}{4}$ -20 x 1.500
12.	710-0895	Hex Washer Screw, $\frac{1}{4}$ -15 x .750
13.	710-3008	Hex Screw, $\frac{5}{16}$ -18 x .75
14.	912-1298	Jam Nut, $\frac{1}{4}$ -20
15.	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
16.	712-04092	U-Type Nut, $\frac{1}{4}$ -20
17.	726-3046	Ratchet Clip, .250
18.	731-06233	RH Console
19.	731-06263	LH Console

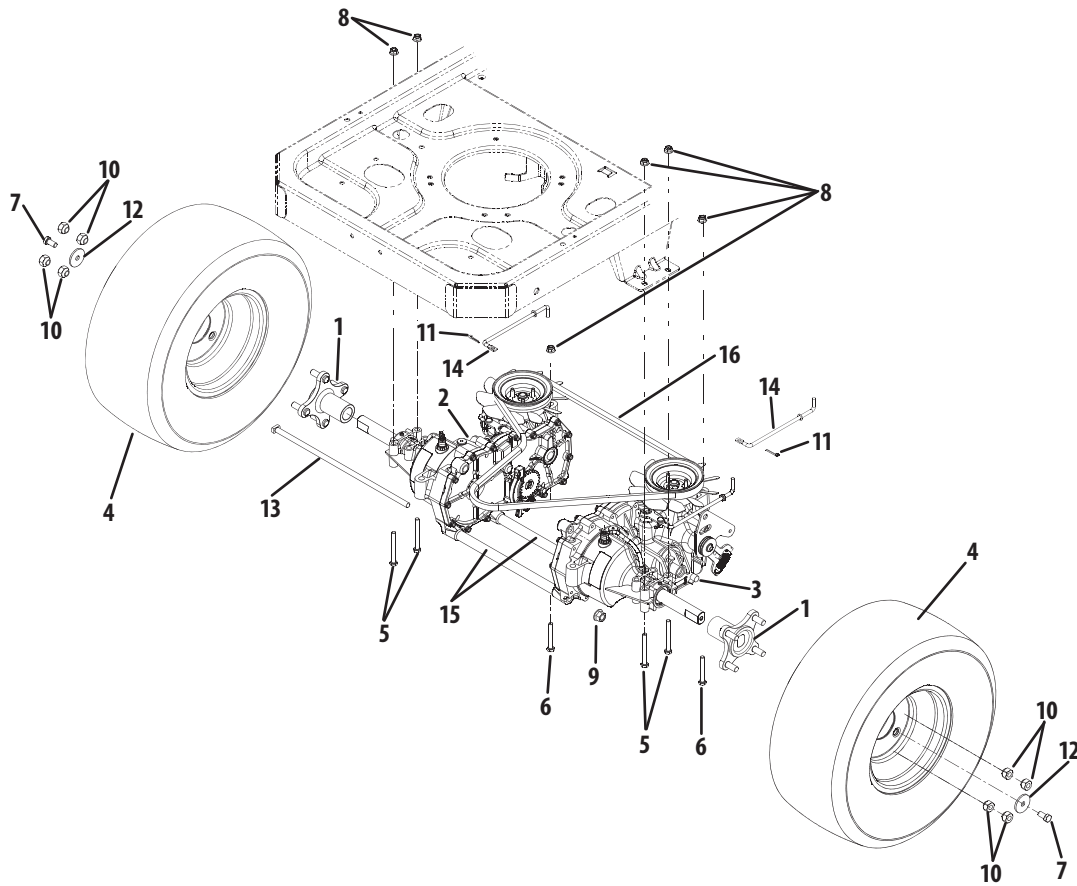 

Ref.	Part Number	Description
1.	918-04317	Wheel Hub, $\frac{7}{16}$ -14 x 1.6
2.	918-04431A	Transmission Assembly, LH
3.	918-04432A	Transmission Assembly, RH
4.	634-04128	Wheel Assembly, 18 x 9.5 x 8 (50")
—	734-1729	Tire, 18 x 9.5 x 8 (50")
—	603-04175-0499	Rim Assembly (50")
—	934-0255	Valve Assembly (50")
5.	710-0176	Hex Cap Screw, $\frac{5}{16}$ -18 x 2.75
6.	710-0395	Hex Cap Screw, $\frac{5}{16}$ -18 x 2.25
7.	710-3119	Hex Cap Screw, $\frac{3}{8}$ -16 x .75


Ref.	Part Number	Description
8.	712-04063	Hex Flange Nut, $\frac{5}{16}$ -18
9.	712-0459	Hex Flange Nut, $\frac{7}{16}$ -20
10.	712-3050	Lug Nut, $\frac{7}{16}$ -14
11.	914-0507	Cotter Pin, $\frac{3}{32}$ x .75
12.	936-0227	Flat Washer, .39 x 1.5 .134
13.	738-04192	Rod, .405 x 14.0
14.	747-04217C-0637	Bypass Rod
15.	750-04561	Tube, .45 x .69 x 10.2
16.	954-04043A	Type A Sec V-Belt, 57.7

 Engine Connection

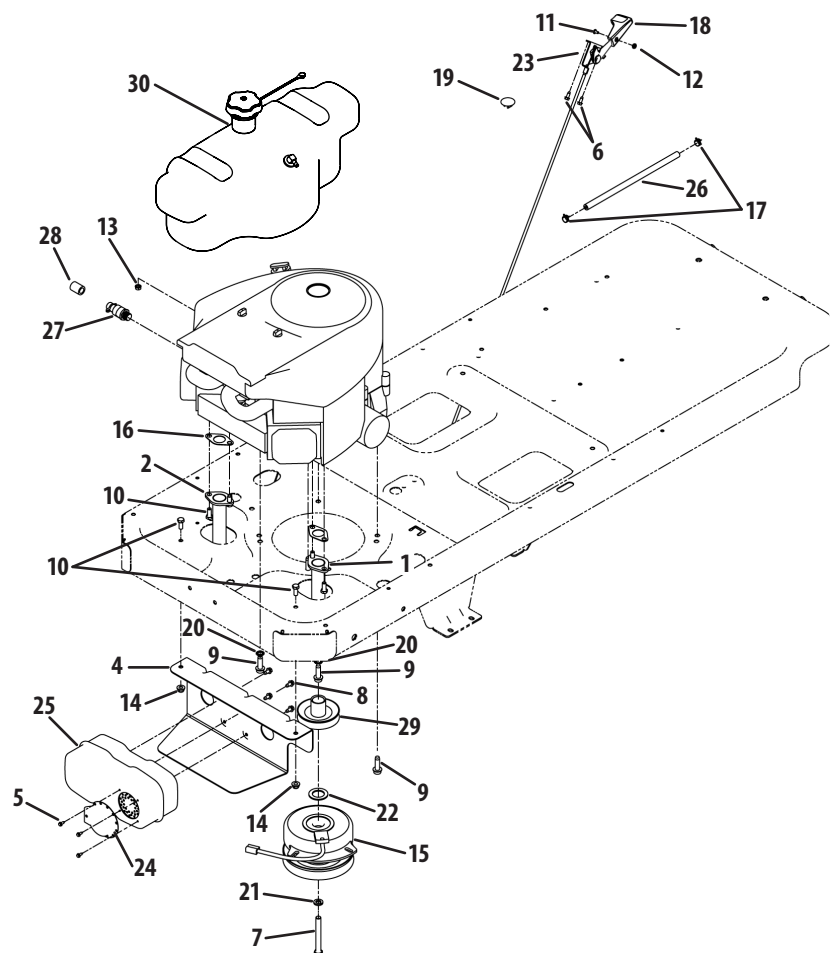


Ref.	Part Number	Description
1.	603-04162	Muffler Exhaust Tube, RH
2.	603-04163	Muffler Exhaust Tube, LH
3.	603-04303C-4021	Frame Assembly
4.	703-05441A	Muffler Mount Bracket
5.	710-0227	Hex Washer Screw, #8-18 x .500
6.	710-04261	Hex Washer Screw, #12-16 x .50
7.	710-04379A	Hex Lock Screw, 7/16-20 x 3.50
8.	710-0599	Hex Washer Screw, 1/4-20 x .500
9.	710-1315	Hex Washer Screw, 3/8-16 x 1.250
10.	710-3008	Hex Screw, 5/16-18 x .75
11.	710-3217	Machine Screw, #8-32 x .375
12.	712-0142	Hex Nut, #8-32
13.	712-0271	Sems Nut, 1/4-20
14.	712-04063	Flange Lock Nut, 5/16-18
15.	917-04552	Electric PTO Clutch
16.	721-0460	Exhaust Gasket
17.	726-0205	Hose Clamp
18.	731-04914	Throttle Control Knob

Ref.	Part Number	Description
19.	731-1999	Choke Plug
20.	736-0148	Lock Washer, 3/8
21.	936-0171	Lock Washer, 7/16
22.	736-0277	Flat Washer, 1.031 x 1.620 x .095
23.	746-04539	Throttle/Choke Control Cable
24.	751-0564B	Muffler Deflector
25.	751-0616B	Muffler
26.	751-10349	Fuel Hose
27.	951-10517A	Oil Drain
28.	751-3141-14	Oil Drain Extension Hose
29.	756-04376	PTO Pulley
30.	751-10692	Fuel Tank Assembly
—	935-0149	Fuel Tank Bushing
—	751-10442	Fuel Pick-Up Fitting
—	751-10692	Fuel Tank
—	751-10703	Fuel Cap
NS	726-0197	Cable Tie

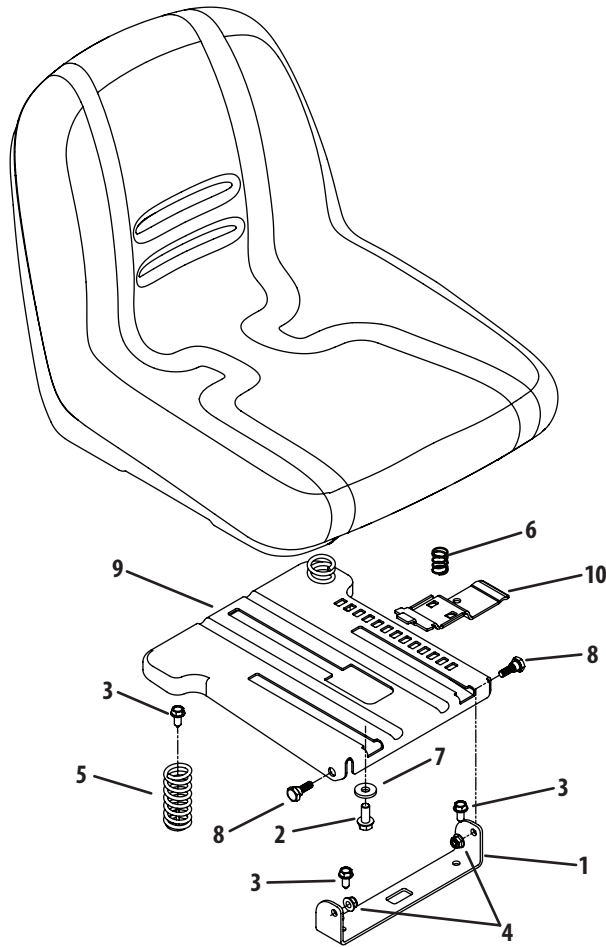 

Ref.	Part Number	Description
1.	703-06941-4021	Seat Bracket
2.	710-04482	Hex Flange Bolt, $\frac{3}{8}$ -16 x .875
3.	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
4.	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
5.	732-04035	Compression Spring
6.	732-04563	Compression Spring
7.	736-0258	Flat Washer, .385 x 1.0 x .135
8.	938-0296	Shoulder Screw, .437 x .268 x $\frac{5}{16}$ -18
9.	783-06049-4021	Seat Mount Bracket
10.	783-06050	Seat Adjustment Lever

 
Deck Lift & Controls

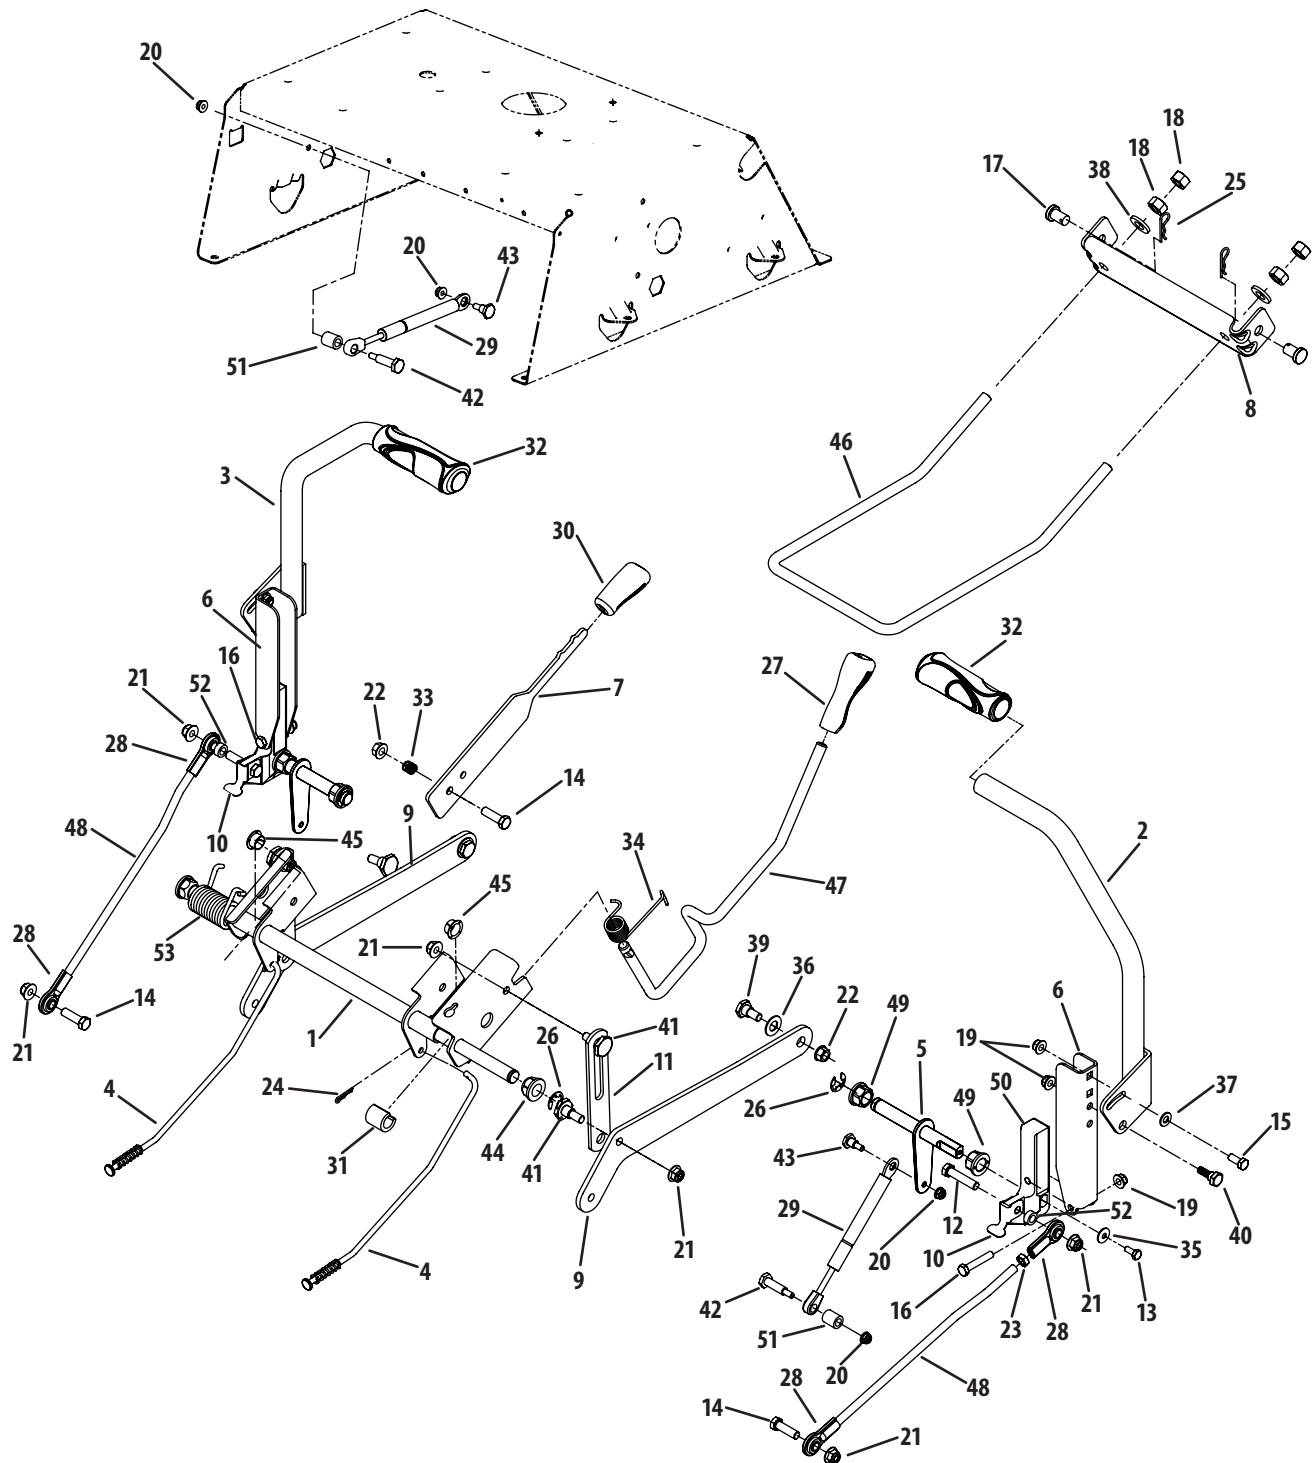

Ref.	Part Number	Description
1.	603-04160B	Deck Lift Shaft Assembly
2.	603-04322-0637	Lapbar Lever RH
3.	603-04324-0637	Lapbar Lever LH
4.	947-04065	Brake Rod
5.	647-04099A	Control Shaft
6.	703-05387B	Lapbar Pivot Bracket
7.	703-05396A-0637	Brake Handle
8.	703-05414A-4021	Front Deck Hanger Bracket
9.	703-05793A-4021	Deck Lift Arm
10.	703-06096	Switch Actuator Bracket
11.	703-06169-063	Lift Link Plate
12.	710-0347	Hex Screw, 3/8-16 x 1.75
13.	710-0433	Hex Lock Screw, 1/4-20 x .62
14.	710-3005	Hex Cap Screw, 3/8-16 x 1.25
15.	710-3008	Hex Cap Screw, 5/16-18 x .75
16.	710-3180	Hex Cap Screw, 5/16-18 x 1.75
17.	911-0332	Clevis Pin, .50 x .78
18.	912-0206	Hex Nut, 1/2-13
19.	712-04063	Hex Flange Insert Lock Nut, 5/16-18
20.	712-04064	Hex Flange Insert Lock Nut, 1/4-20
21.	712-04065	Hex Flange Insert Lock Nut, 3/8-16
22.	912-0431	Hex Flange Lock Nut, 3/8-16
23.	912-3001	Jam Nut, 3/8-24
24.	914-0104	Cotter Pin
25.	914-04023	Cotter Pin
26.	716-0106	E-Ring, .625 Dia.
27.	720-0311	Handle Grip

Ref.	Part Number	Description
28.	723-04035	Rod End
29.	727-04141	Damper Cylinder
30.	731-04735	Handle Grip
31.	731-05732	Spacer, .62 x 1.0
32.	731-05882	Hand Grip
33.	932-0334	Compression Spring
34.	732-0874	Torsion Spring
35.	736-0270	Bell Washer, .265 x .75 x .062
36.	936-0272	Flat Washer, .51 x 1.0 x .06
37.	936-0275	Flat Washer, .344 x .688 x .065
38.	736-3019	Flat Washer, .531 x 1.062 x .134
39.	738-0143	Shoulder Screw, .498 x .340 x 3/8-16
40.	938-0296	Shoulder Screw, .437 x .268 x 5/16-18
41.	938-0507B	Shoulder Screw, .5 x .434 x 3/8-16
42.	938-0572	Shoulder Screw, .374 x 1.16 x 1/4-20
43.	938-0974	Shoulder Screw, .375 x .38 x 1/4-20
44.	941-0225	Hex Flange Bearing
45.	741-3074	Flange Bearing, .626 x .938 x .344
46.	747-04401A	Deck Front Hanger Rod
47.	747-04637	Deck Lift Handle Rod
48.	747-05057	Lapbar Control Rod
49.	948-0227A	Hex Flange Bearing
50.	748-04169A	Control Hub
51.	750-04676	Spacer, .385 x .630 x .75
52.	750-04776	Spacer, .380 x .625 x .265
53.	732-04420	Torsion Spring


Mower Deck

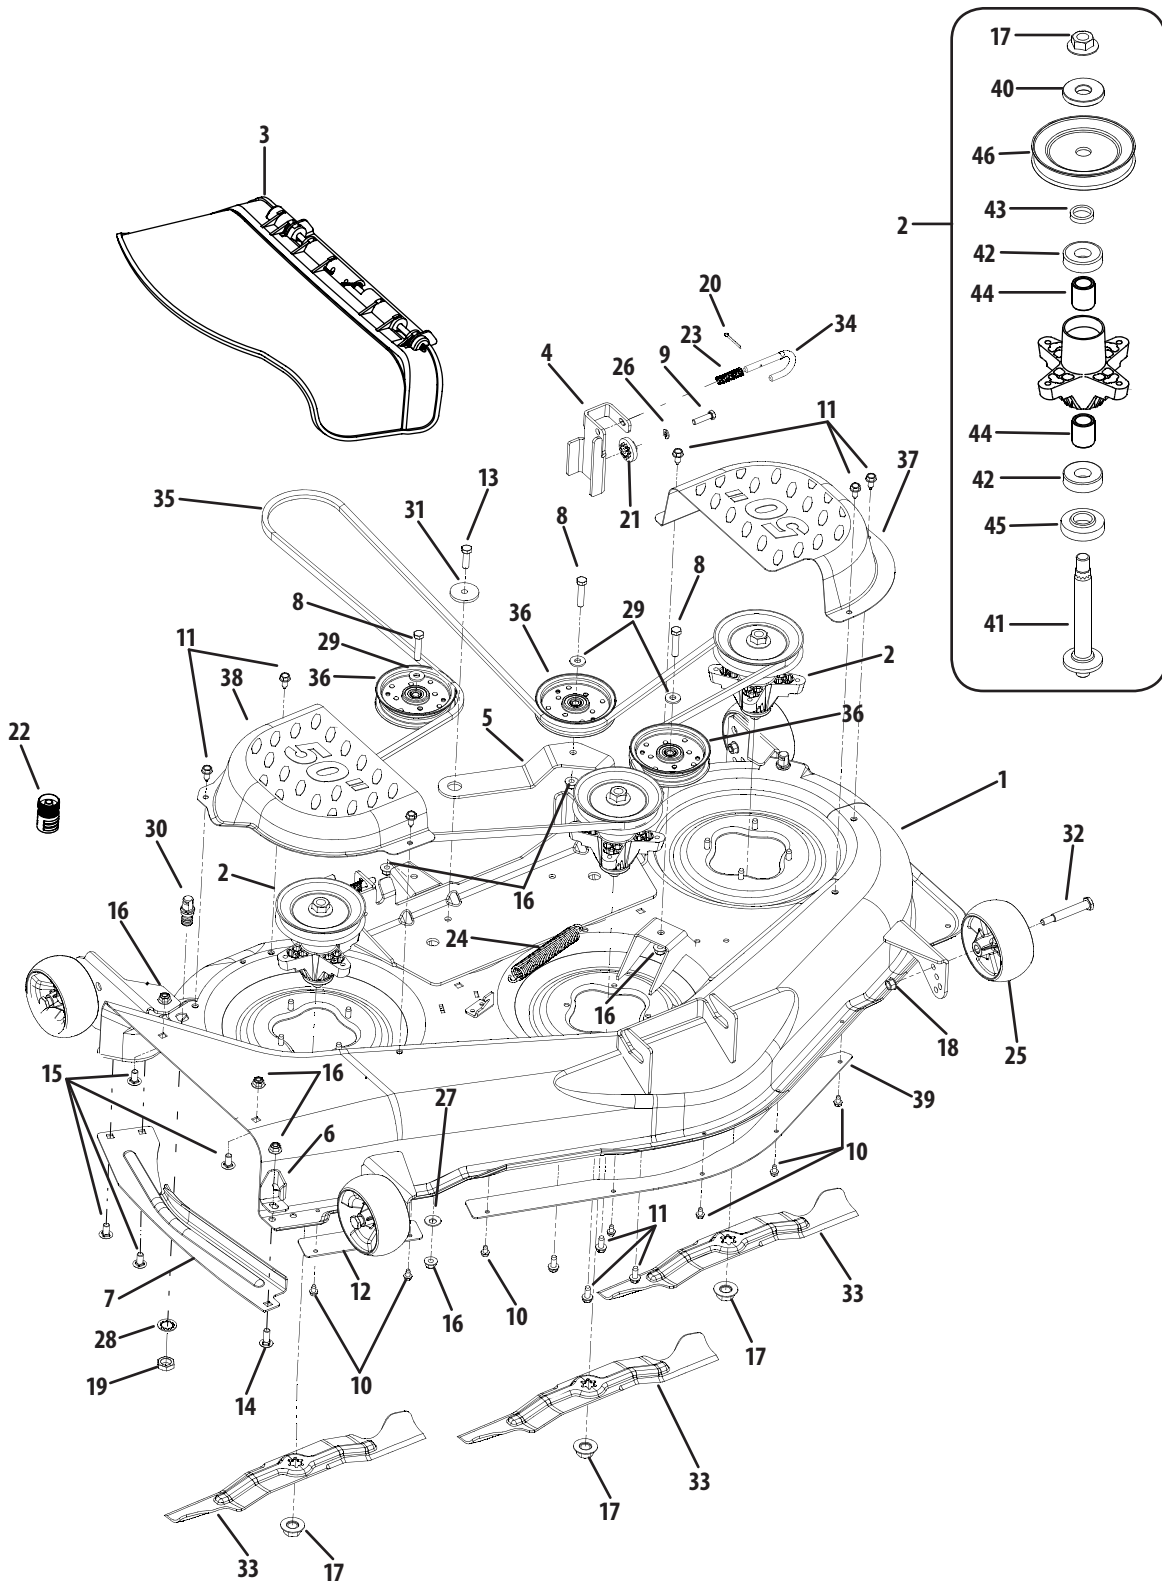









Ref.	Part Number	Description
1.	603-04328A-4021	Deck Housing
2.	918-04126A	Spindle Assembly
3.	631-04070A	Discharge Chute Assembly
4.	683-0254-0637	Deck Hanger Bracket
5.	703-05825B-4021	Idler Arm
6.	703-3279-4021	Stop Bracket
7.	703-3511A-0637	Finger Guard
8.	710-0347	Hex Cap Screw, 3/8-16 x 1.75
9.	710-0528	Hex Cap Screw, 5/16-18 x 1.25
10.	710-0599	Hex Washer Head Screw, 1/4-20 x .5
11.	710-04484	Hex Washer Head Screw, 5/16-18 x .750
12.	783-04415-4021	Skirt, RH
13.	710-3005	Hex Cap Screw, 3/8-16 x 1.25
14.	710-3168	Carriage Screw, 3/8-16 x 1.0
15.	710-3178	Carriage Screw, 3/8-16 x .75
16.	712-04065	Hex Insert Flange Lock Nut, 3/8-16
17.	712-0417A	Hex Flange Nut, 5/8-18
18.	912-0431	Hex Flange Lock Nut, 3/8-16
19.	912-0641	Hex Nut, M16-1.5
20.	914-0470	Cotter Pin, 1/8 x 1.25
21.	917-04074	Deck Adjustment Gear
22.	921-04041	Water Nozzle Adapter
23.	932-0306A	Compression Spring

Ref.	Part Number	Description
24.	932-04609	Extension Spring, .94 x 6.74
25.	734-04155	Deck Ball Wheel, 5.0
26.	936-0119	Lock Washer, 5/16
27.	736-0407	Bell Washer, .45 x 1.0 x .062
28.	736-0225	Internal Tooth Lock Washer, 5/8
29.	736-3072	Flat Washer, .38 x .93 x .110
30.	737-04003D	Deck Wash Nozzle
31.	738-04162A	Shoulder Spacer, .884 x .190
32.	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
33.	942-04053C	Blade, 2 in 1, 17.9
34.	747-1116	Deck Hanger Rod
35.	954-04044A	V-Belt
36.	756-04129	Idler Pulley, 4.25 Dia
37.	783-04399-4021	Belt Cover, LH
38.	783-04400-4021	Belt Cover, RH
39.	783-04414A-4021	Center Skirt
40.	736-0315	Flat Washer, .76 x 1.50 x .12
41.	738-1010A	Spindle Shaft, 5.75
42.	941-0919	Ball Bearing
43.	748-0160A	Spacer, .79 x 1.25 x .175
44.	750-1000	Spacer, .80 x 1.10 x 1.32
45.	750-1349A	Spacer, .79 x 1.82 x .55
46.	756-04216	V-Type Pulley, 5.39





Front Axle

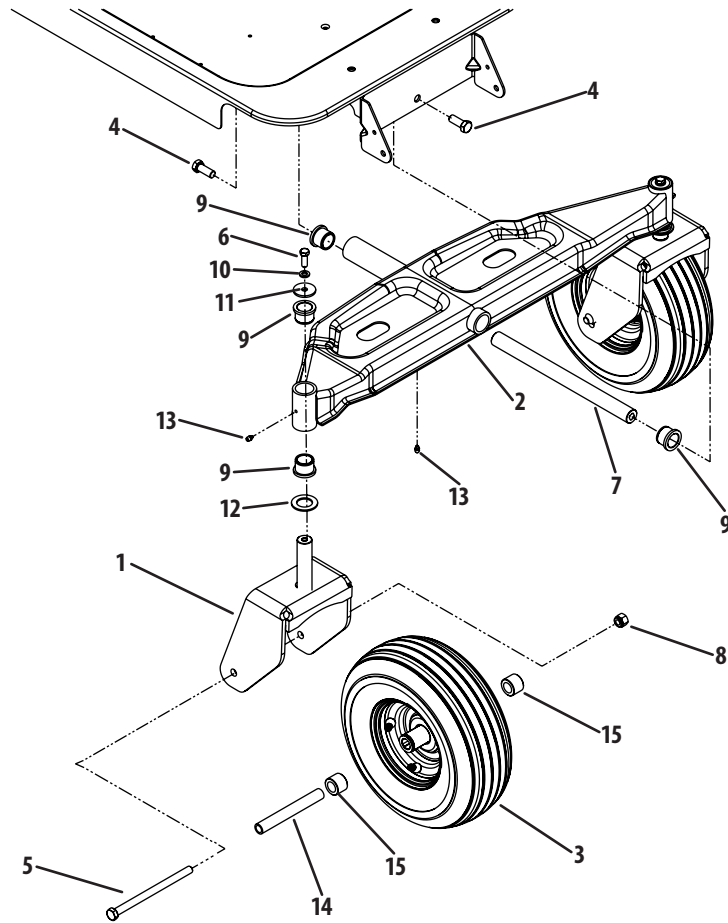



Ref.	Part Number	Description
1.	603-04370-4021	Castor Wheel Bracket
2.	603-04385A-4021	Front Pivot Axle
3.	634-04321A	Wheel Assembly, 13 x 5-6
—	734-04255A	Tire, 13 x 5-6
4.	710-04186	Hex Lock Screw, 1/2-13 x 1.25
5.	710-04652	Hex Cap Screw, 1/2-20 x 7.25
6.	710-0514	Hex Cap Screw, 3/8-16 x 1.0
7.	911-04228	Axle Shaft
8.	912-3058	Hex Insert Lock Nut, 1/2-13
9.	731-05500	Flange Bearing, 1.0 x 1.246
10.	936-0169	Lock Washer, 3/8
11.	936-0227	Flat Washer, .39 x 1.5 x .134
12.	736-0250	Flat Washer, 1.0 x 1.75 x .10
13.	937-3000	Lube Fitting, 3/16 Drive
14.	750-04775A	Spacer, .51 x .75 x 5.825
15.	750-04792	Hub, .76 x 1.23 x .92

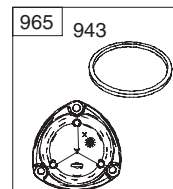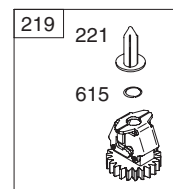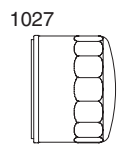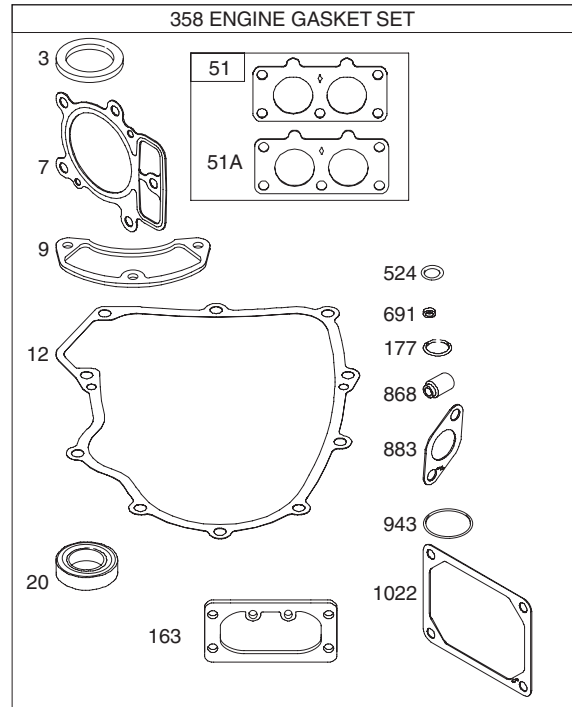     
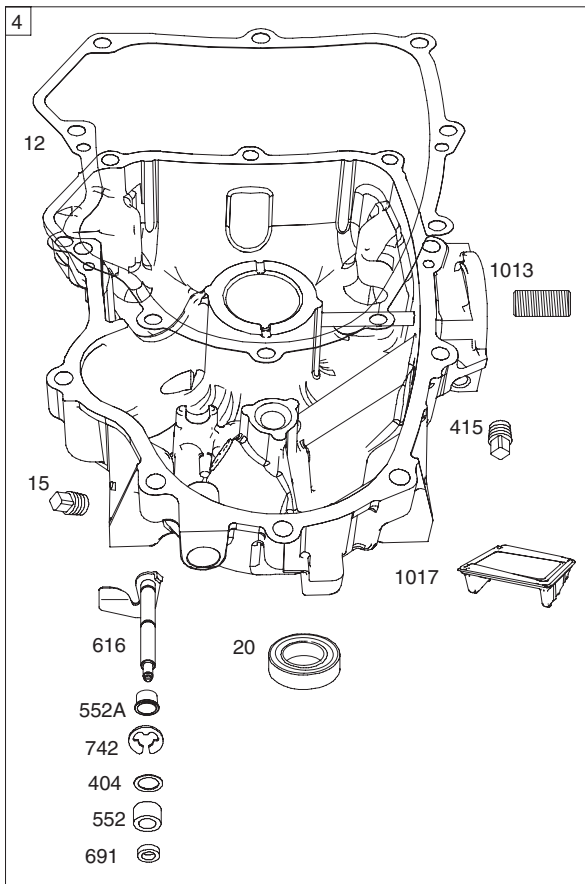 
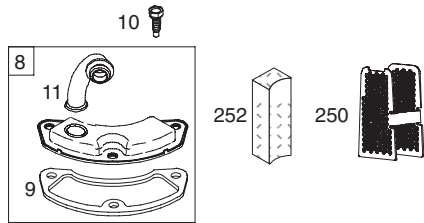 
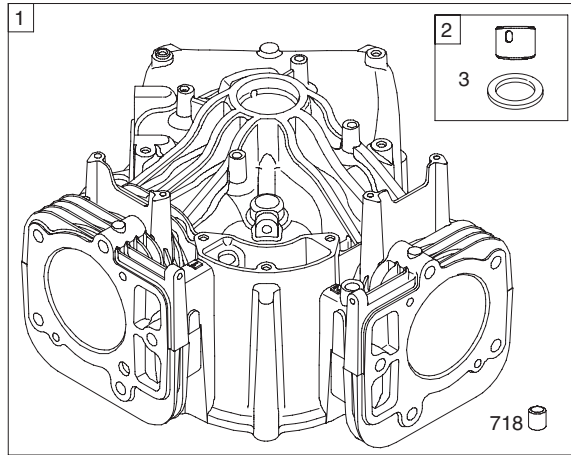 


Briggs & Stratton 724 ELS Twin

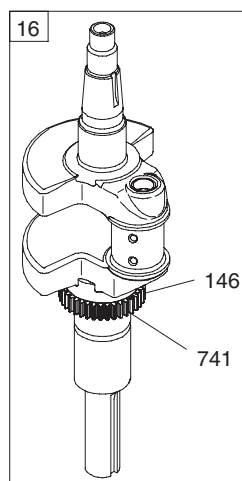 
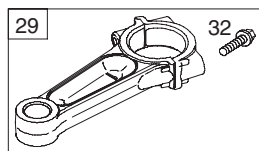 
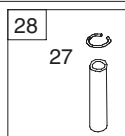 
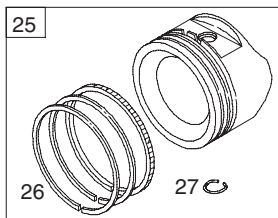 






24 1

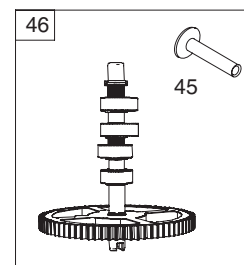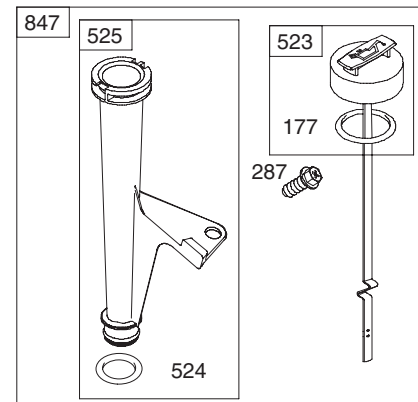  







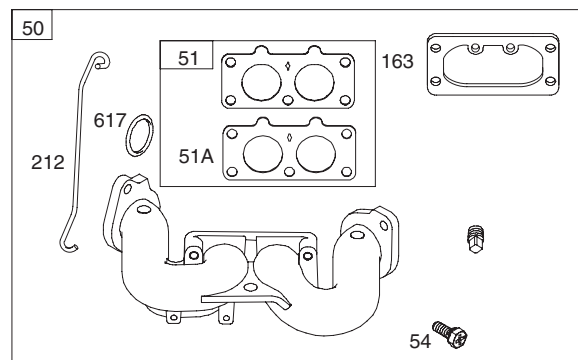 
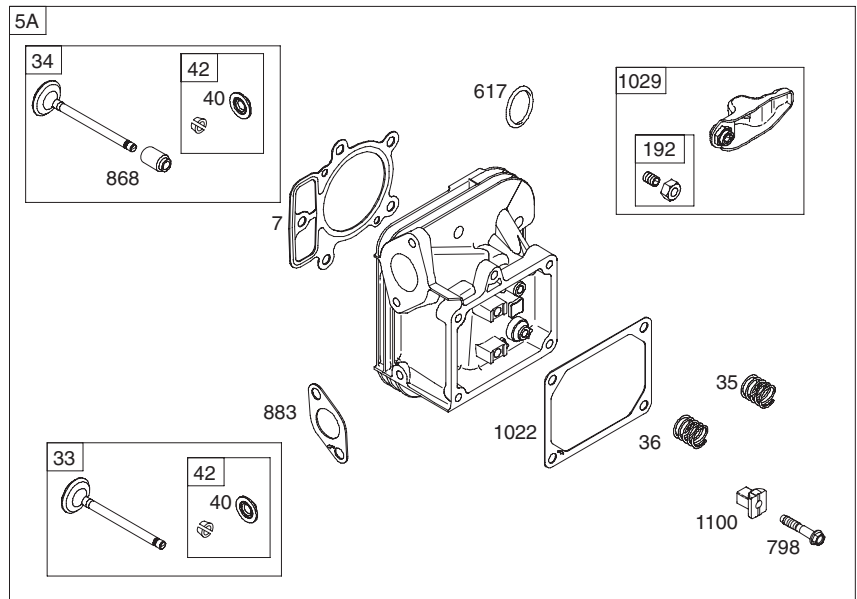 
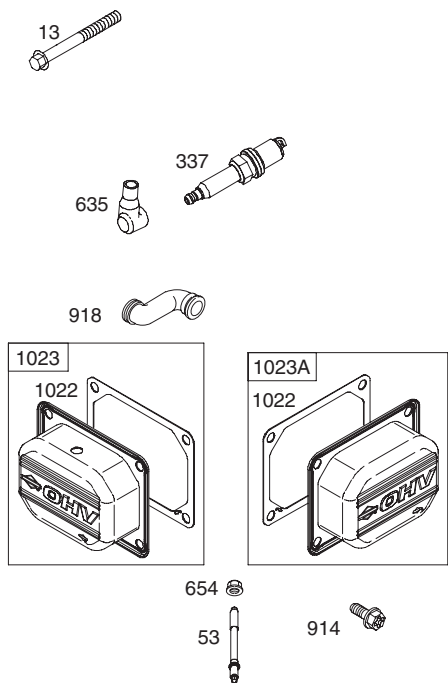 
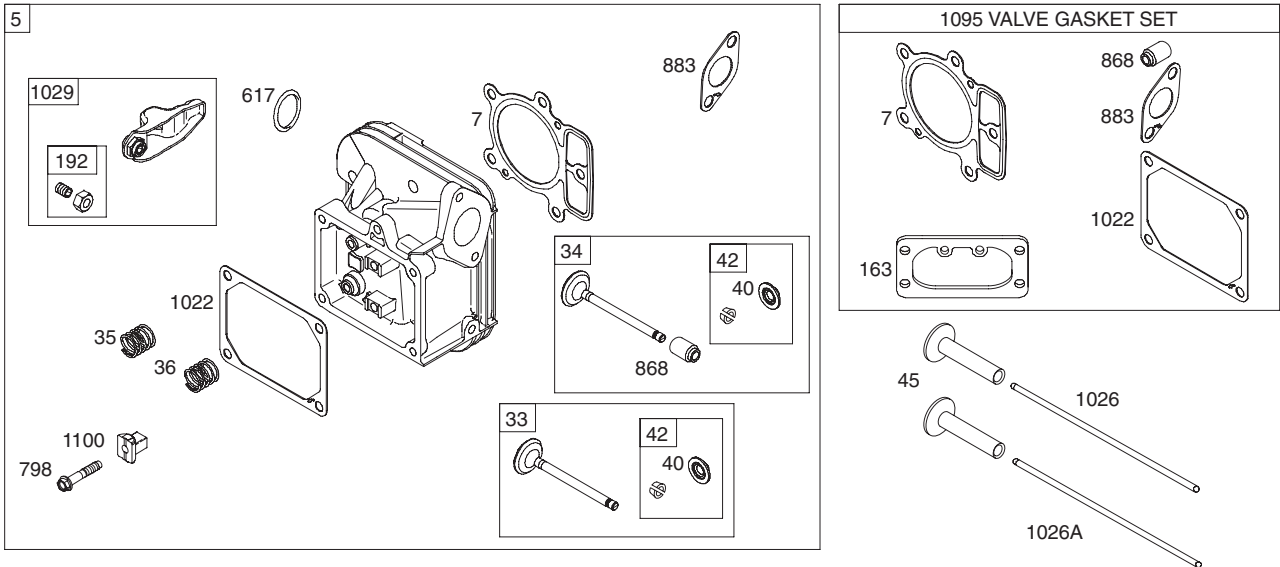 


Briggs & Stratton 724 ELS Twin

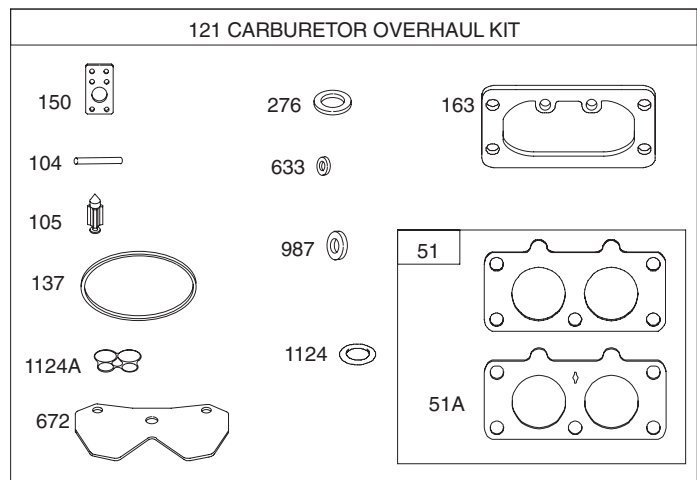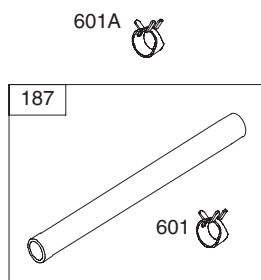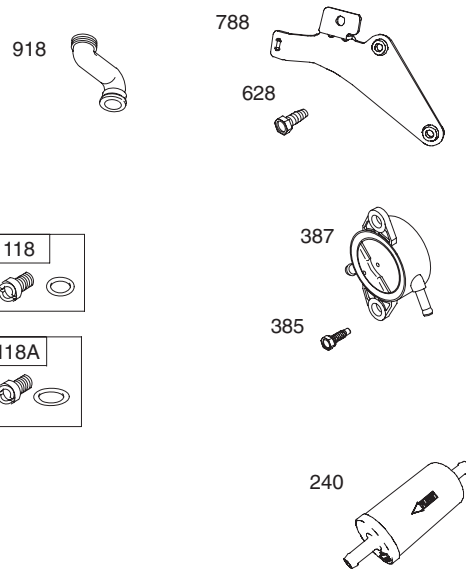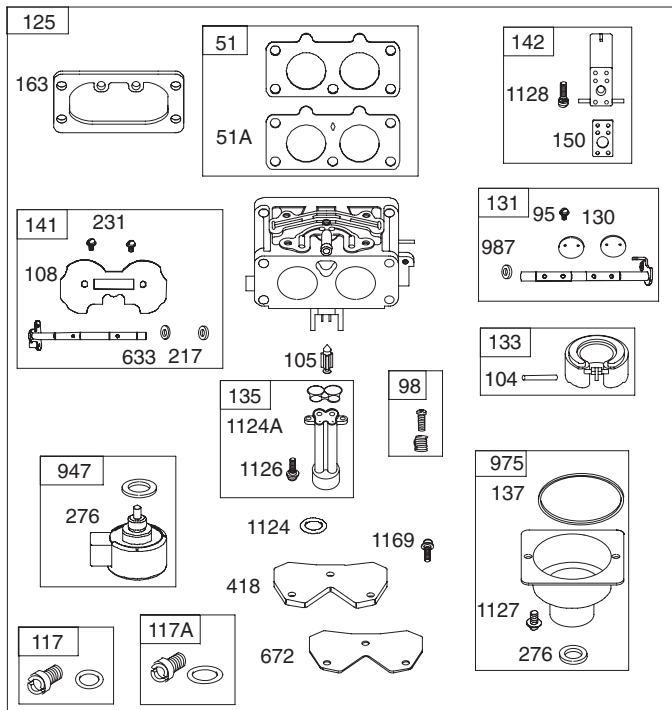    

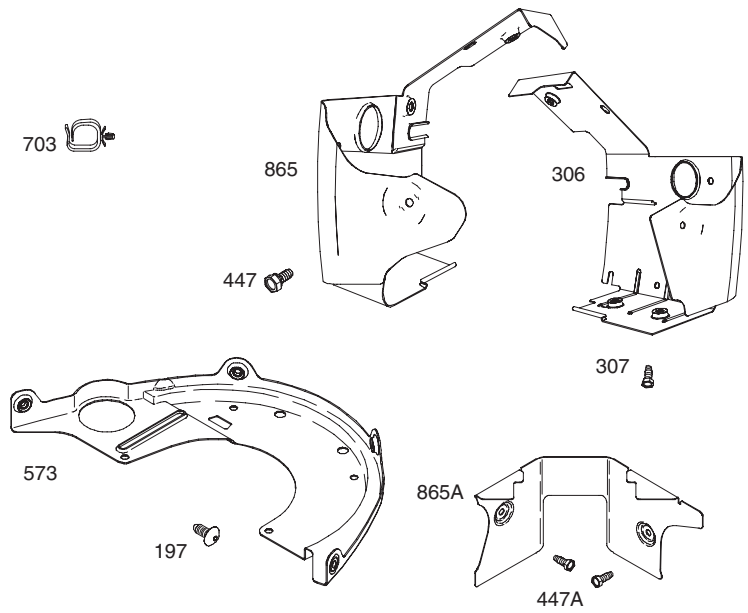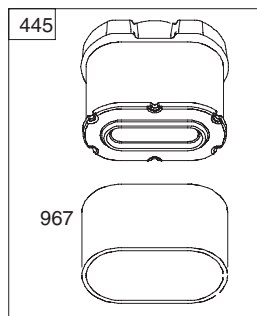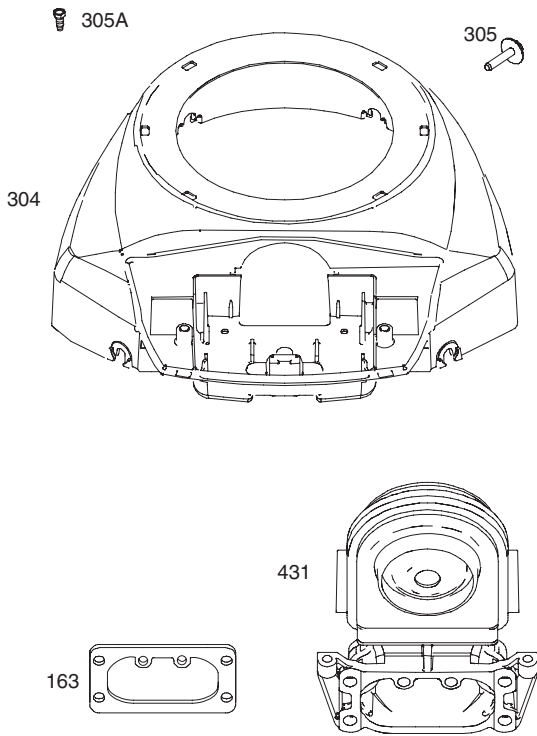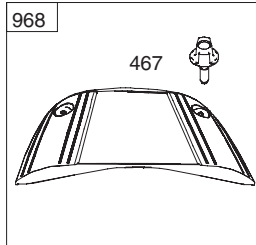    

Briggs & Stratton 724 ELS Twin

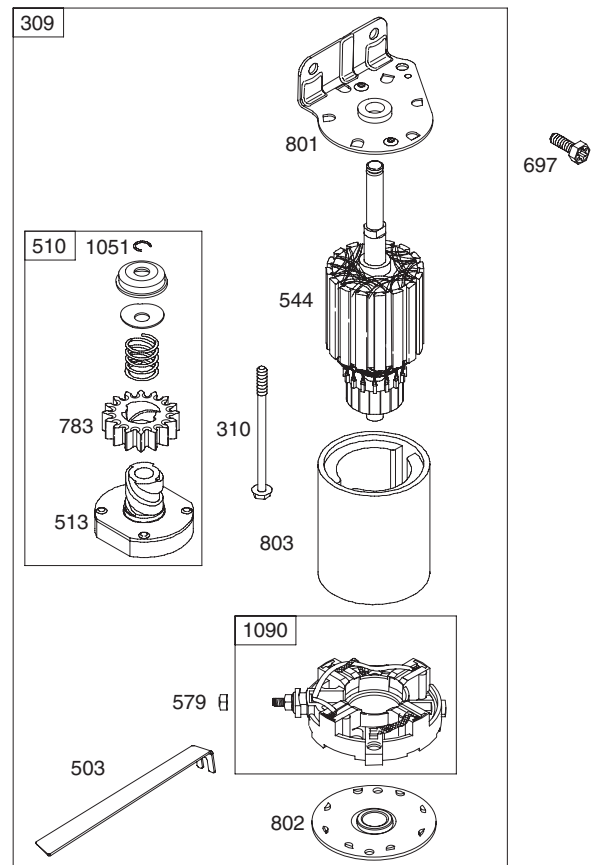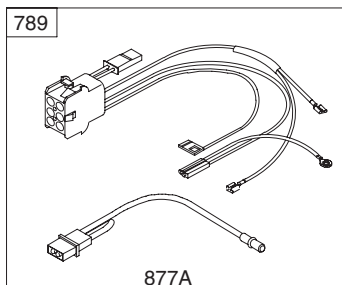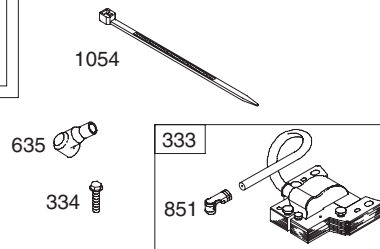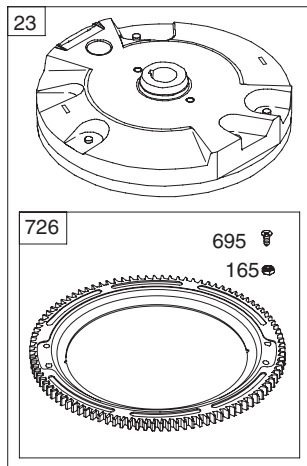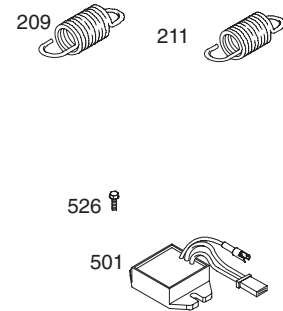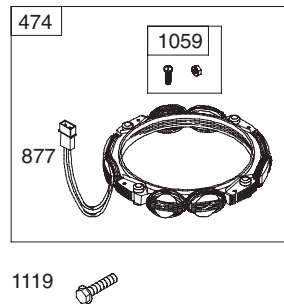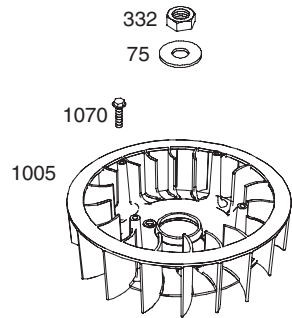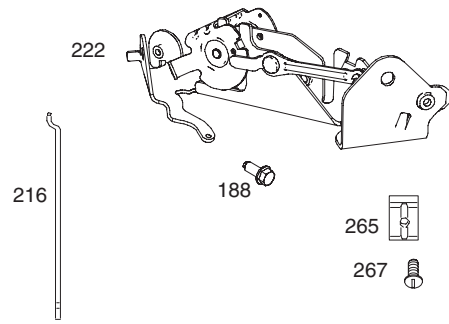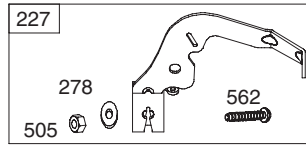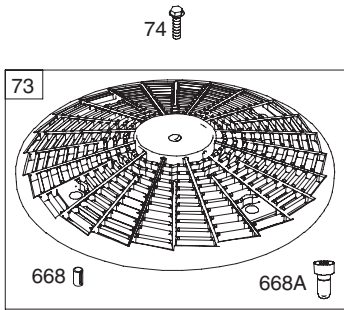          

Briggs & Stratton 724 ELS Twin

Ref.	Part Number	Description
1.	BS-793564	Cylinder Assembly
2.	BS-499585	Bushing/Seal Kit (Magneto Side)
3.	BS-391085	Oil Seal (Magneto Side) +
4.	BS-796230	Engine Sump
5.	BS-796231	Cylinder Head (Cylinder #1)
5A.	BS-796232	Cylinder Head (Cylinder #2)
7.	BS-693997	Cylinder Head Gasket +&
8.	BS-792185	Breather Assembly
9.	BS-690937	Breather Gasket +
10.	BS-697551	Screw (Breather Assembly)
11.	BS-792184	Breather Tube
12.	BS-697227	Crankcase Gasket +
13.	BS-793988	Screw (Cylinder Head)
15.	BS-690946	Oil Drain Plug
16.	BS-796237	Crankshaft
20.	BS-795387	Oil Seal (PTO Side) +
22.	BS-694966	Screw (Crankcase Cover/Sump)
23.	BS-691053	Flywheel
24.	BS-222698s	Flywheel Key
25.	BS-792023	Piston Assembly (Standard)
25.	BS-792072	Piston Assembly (.020" Oversize)
26.	BS-793561	Ring Set (Standard)
26.	BS-792073	Ring Set (.020" Oversize)
27.	BS-690975	Piston Pin Lock
28.	BS-696581	Piston Pin
29.	BS-699699	Connecting Rod
32.	BS-690976	Screw (Connecting Rod)
33.	BS-697576	Exhaust Valve
34.	BS-792200	Intake Valve
35.	BS-694865	Valve Spring (Intake)
36.	BS-694865	Valve Spring (Exhaust)
40.	BS-690964	Valve Retainer
42.	BS-499586	Valve Keeper
45.	BS-690977	Valve Tappet
46.	BS-792555	Cam Gear
48.	BS-698172	Short Block
50.	BS-695241	Intake Manifold
51.	BS-795123	Intake Gasket +
51A.	BS-690950	Intake Gasket
53.	BS-690951	Stud (Carburetor)
54.	BS-699816	Screw (Intake Manifold)

Ref.	Part Number	Description
73.	BS-494439	Rotating Screen
74.	BS-698425	Screw (Rotating Screen)
75.	BS-691056	Washer (Flywheel)
95.	BS-690718	Screw (Throttle Valve)
98.	BS-699721	Idle Speed Kit
104.	BS-694918	Float Hinge Pin %
105.	BS-698537	Float Needle Valve
08.	BS-699723	Choke Valve
117.	BS-792296	Main Jet (Standard) (Left Jet)
117A.	BS-842627	Main Jet (Standard) (Right Jet)
118.	BS-699457	Main Jet (High Altitude) (Left Jet)
118A.	BS-699733	Main Jet (High Altitude) (Right Jet)
121.	BS-792455	Carburetor Overhaul Kit
125.	BS-796227	Carburetor
130.	BS-690993	Throttle Valve
131.	BS-499805	Throttle Shaft Kit
133.	BS-699724	Carburetor Float
135.	BS-699729	Fuel Transfer Tube
137.	BS-690994	Float Bowl Gasket %
141.	BS-796228	Choke Shaft Kit
142.	BS-699726	Carburetor Nozzle
146.	BS-690979	Timing Key
150.	BS-690995	Nozzle Gasket
163.	BS-691001	Air Cleaner Gasket +%
165.	BS-693148	Nut (Ring Gear)
177.	BS-691031	O-Ring Seal (Dipstick)
187.	751-0535-15	Fuel Line (Cut to Required Length)
188.	BS-697551	Screw (Control Bracket)
192.	BS-690083	Rocker Arm Adjuster
197.	BS-697820	Screw (Back Plate)
209.	BS-796267	Governor Spring (Dark Green/ Purple)
211.	BS-796225	Governed Idle Spring (Orange)
212.	BS-695238	Throttle Link
216.	BS-796229	Choke Link
217.	BS-695409	Choke Return Spring
219.	BS-793338	Governor Gear
220.	BS-690412	Washer (Governor Gear)
221.	BS-841026	Governor Cup

+ — Included in Engine Gasket Set, Key. No. 358

& — Included in Valve Gasket Set, Key No. 1095

% — Included in Carburetor Overhaul Kit, Key No. 121

Briggs & Stratton 724 ELS Twin

Ref.	Part Number	Description
222.	BS-796226	Control Bracket
227.	BS-796223	Governor Control Lever
231.	BS-690718	Screw (Choke Valve)
239.	BS-792028	Oil Pressure Switch
240.	BS-691035	Fuel Filter
250.	BS-690957	Breather Retainer
252.	BS-794389	Oil Collector
265.	BS-691024	Casing Clamp
267.	BS-695134	Screw (Casing Clamp)
276.	BS-695410	Sealing Washer (Fuel Solenoid) %
278.	BS-792651	Washer (Governor Control Lever)
287.	BS-697551	Screw (Dipstick Tube)
304.	BS-796678	Blower Housing
305.	BS-691005	Screw (Blower Housing)
305A.	BS-790690	Screw (Blower Housing to Intake Elbow)
306.	BS-796541	Cylinder Shield (Cylinder #2)
307.	BS-697551	Screw (Cylinder Shield) (1/4-20 x 2/3)
309.	BS-795121	Starter Motor
310.	BS-691263	Screw (Starter Motor)
332.	BS-691059	Nut (Flywheel)
333.	BS-691060	Magneto Armature
334.	BS-691061	Screw (Magneto Armature)
337.	769-3336	Spark Plug
358.	BS-694012	Engine Gasket Set
385.	BS-697551	Screw (Fuel Pump)
387.	BS-808656	Fuel Pump
404.	BS-690442	Washer (Governor Crank)
415.	BS-794903	Plug (Oil Pressure Switch)
418.	BS-795912	Carburetor Plate
431.	BS-792297	Intake Elbow
445.	BS-792105	Air Cleaner Cartridge Filter
447.	BS-691003	Screw (Air Guide Cover) (10-24 x 7/16)
447A.	BS-697551	Screw (Air Guide Cover)
467.	BS-790697	Air Cleaner Knob
474.	BS-696457	Alternator
501.	BS-794360	Regulator
503.	BS-691532	Starter Strap
505.	BS-691029	Nut (Governor Control Lever)
510.	BS-696541	Starter Drive
513.	BS-692024	Drive Clutch

Ref.	Part Number	Description
523.	BS-691036	Dipstick
524.	BS-691032	Dipstick Tube Seal +
525.	BS-691037	Dipstick Tube
526.	BS-691129	Screw (Regulator)
544.	—	Starter Armature (Service with Starter Motor 795121, Reference 309)
552.	BS-690552	Governor Crank Bushing
552A.	BS-690553	Governor Crank Bushing
562.	BS-690311	Screw (Governor Control Lever)
573.	BS-790444	Back Plate
579.	BS-691029	Nut (Starter Cable)
601.	BS-691038	Hose Clamp (Black)
601A.	BS-791850	Hose Clamp (Green)
615.	BS-698290	Governor Shaft Retainer
616.	BS-691045	Governor Crank
617.	BS-697891	O-Ring Seal (Intake Manifold) (Red)
628.	BS-697551	Screw (Fuel Pump Bracket)
633.	BS-699813	Choke Seal/Throttle Shaft %
635.	BS-66538s	Spark Plug boot
654.	BS-690958	Nut (Carburetor)
668.	BS-691215	Spacer (Rotating Screen) +
668A.	BS-691500	Spacer (Rotating Screen)
672.	BS-690234	Carburetor Plate Gasket
691.	BS-790574	Governor Shaft Seal +
695.	BS-693149	Screw (Ring Gear)
697.	BS-690372	Screw (Drive Cap)
703.	BS-691010	Clip
718.	BS-690959	Locating Pin
726.	BS-499612	Ring Gear
729.	BS-694123	Wire Clip
741.	BS-690980	Timing Gear
742.	BS-690328	E-Ring Retainer (Governor Crank)
750.	BS-696999	Screw (Oil Pump Cover)
783.	BS-695708	Pinion Gear
788.	BS-793145	Fuel Pump Bracket
789.	BS-698330	Wiring Harness
798.	BS-697890	Screw (Rocker Arm)

+ — Included in Engine Gasket Set, Key. No. 358

& — Included in Valve Gasket Set, Key No. 1095

% — Included in Carburetor Overhaul Kit, Key No. 121


Ref.	Part Number	Description
801.	BS-691283	Drive Cap
802.	BS-691286	End Cap
803.	—	Starter Housing (Service with Starter Motor 795121, Reference 309)
847.	BS-499602	Dipstick/Tube Assembly
851.	BS-493880S	Spark Plug Terminal
865.	BS-691012	Air Guide Cover (Cylinder #1)
865A.	BS-792286	Air Guide Cover (Valley)
868.	BS-690968	Valve Seal +
877.	BS-399916	Alternator Connector Wire
877A.	BS-790544	Alternator Connector Wire
883.	BS-690970	Exhaust Gasket +&
914.	BS-691127	Screw (Rocker Cover)
918.	BS-793147	Vacuum Hose
943.	BS-796222	O-Ring Seal (Oil Pump Cover)
947.	BS-841546	Fuel Solenoid
965.	BS-796221	Oil Pump Cover
967.	BS-792303	Pre-Cleaner Filter
968.	BS-795120	Air Cleaner Cover
975.	BS-793592	Float Bowl
987.	BS-691000	Throttle Shaft Seal
1005.	BS-791236	Flywheel Fan
1013.	BS-690954	Oil Filter Nipple
1017.	BS-796214	Oil Pump Screen
1022.	BS-690971	Rocker Cover Gasket
1023.	BS-793146	Rocker Cover (Cylinder #1)
1023A.	BS-499600	Rocker Cover (Cylinder #2)
1024.	BS-796220	Oil Pump
1026.	BS-690981	Push Rod (Exhaust)
1026A.	BS-690982	Push Rod (Intake)
1027.	BS-795890	Oil Filter
1029.	BS-690972	Rocker Arm
1036.	—	Emissions Label (Available from a Briggs & Stratton Authorized Dealer)
1051.	BS-691265	Retaining Ring (Starter Drive)
1054.	BS-280275	Cable Tie
1058.	BS-277103	Operator's Manual
1059.	BS-698516	Screw/Washer Kit (Alternator)
1070.	BS-791680	Screw (Flywheel Fan)
1090.	BS-691293	Brush Retainer

Ref.	Part Number	Description
1095.	BS-694013	Valve Gasket Set
1100.	BS-791959	Rocker Arm Pivot
1119.	BS-93621	Screw (Alternator)
1124.	BS-841653	O-Ring Seal (Fuel Transfer Tube)
1124A.	BS-690988	O-Ring Seal (Fuel Transfer Tube)
1126.	BS-690991	Screw (Fuel Transfer Tube)
1127.	BS-695407	Screw (Fuel Bowl)
1128.	BS-690990	Screw (Carburetor Nozzle)
1169.	BS-690990	Screw (Carburetor Plate)

+ — Included in Engine Gasket Set, Key. No. 358

& — Included in Valve Gasket Set, Key No. 1095

 % — Included in Carburetor Overhaul Kit, Key No. 121

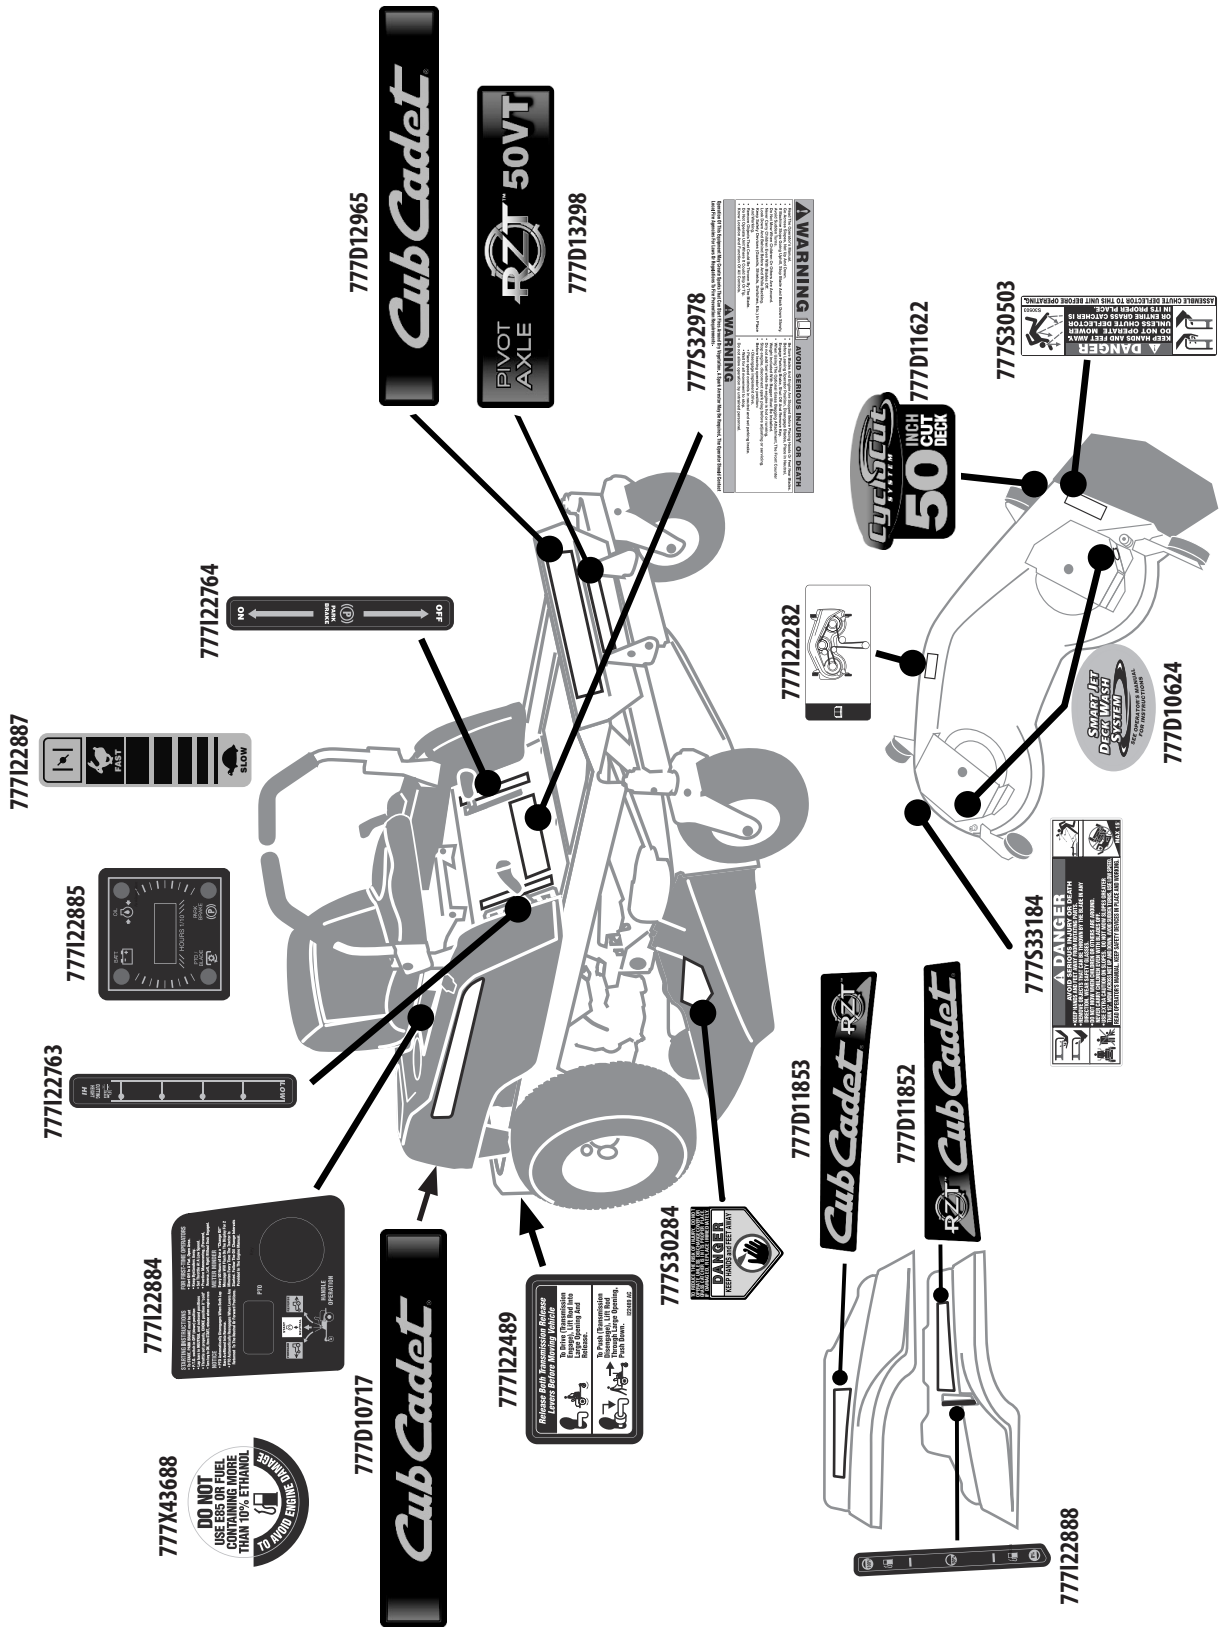

Notes



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
