

Cub Cadet[®]

ILLUSTRATED PARTS MANUAL

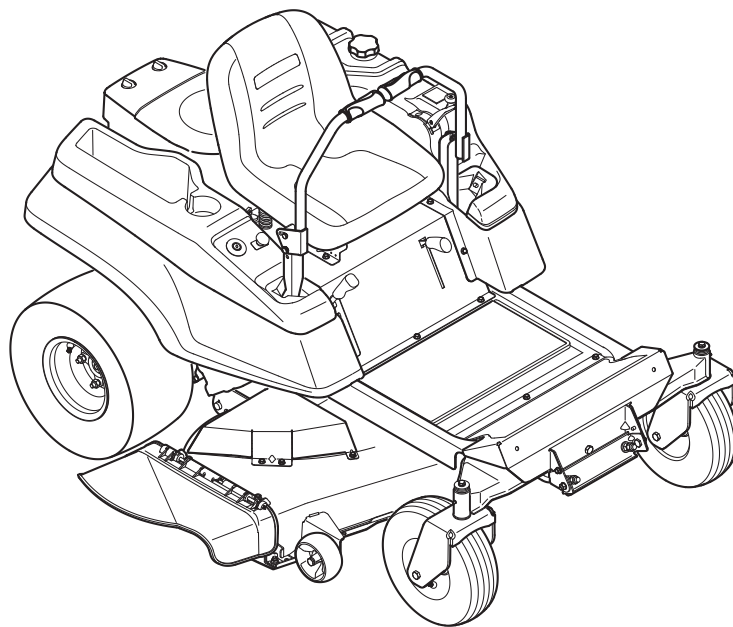

54" RZT Series Tractor

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Zero-Turn Tractor. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

<i>Axle, Front</i>	7	<i>Muffler</i>	8
<i>Battery</i>	4	<i>PTO Lever</i>	4
<i>Mower Deck</i>	12	<i>Seat</i>	5
<i>Lapbar Levers</i>	10	<i>Solenoid</i>	4
<i>Consoles</i>	5	<i>Switches, Interlock</i>	4
<i>Drive System</i>	6	<i>Throttle Control</i>	8
<i>Electrical Schematic</i>	30	<i>Choke Control</i>	8
<i>Engine, Kawasaki FR651V-AS05</i>	16-29	<i>Transmission</i>	6
<i>Engine Accessories</i>	8	<i>Wheels, Front & Rear</i>	6
<i>Frame</i>	3		
<i>Fuel Tank</i>	8		
<i>Deck Lift Handle/Linkage</i>	10		
<i>Hour Meter</i>	4		
<i>Labels</i>	31		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--


Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black
4021	Yellow (Cub Cadet)
0499	Beige (Cub Cadet)


0685	Blue (Cub Cadet)
0691	Black Jack (Cub Cadet Commercial)

Frame & Drive Idler Assembly

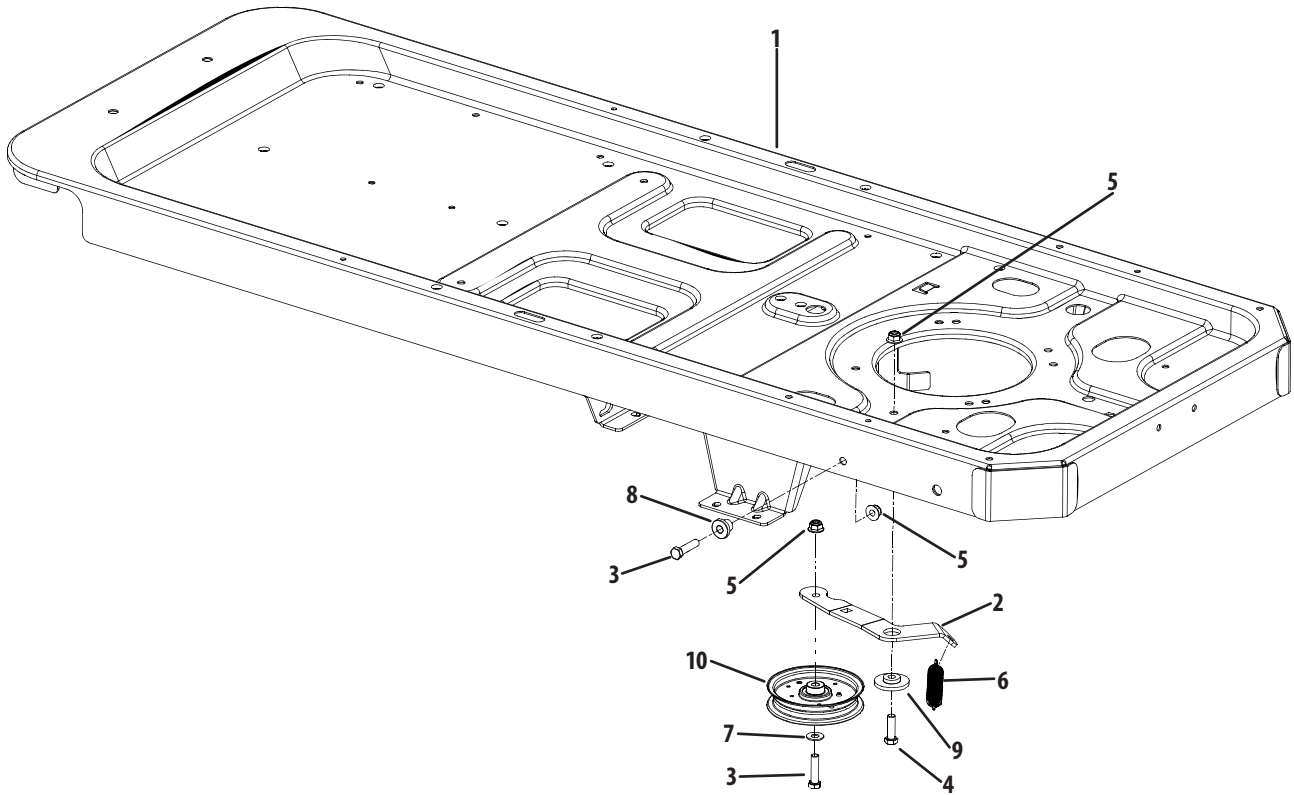


Ref.	Part Number	Description
1.	603-04691	Frame Assembly
2.	703-05829	Drive Idler Arm
3.	710-0520	Hex Screw, 3/8-16 x 1.5
4.	710-3005	Hex Screw, 3/8-16 x 1.25
5.	712-04065	Flange Nut, 3/8-16
6.	732-0626	Extension Spring, .75 x 5.06
7.	936-0300	Flat Washer, .408 x .875 x .059
8.	738-04058	Shoulder Spacer, .39 x 1.0 x .7
9.	738-04162A	Shoulder Spacer, .884 x .19
10.	756-04129B	Idler Pulley, 4.25 Dia.

Operator's Platform

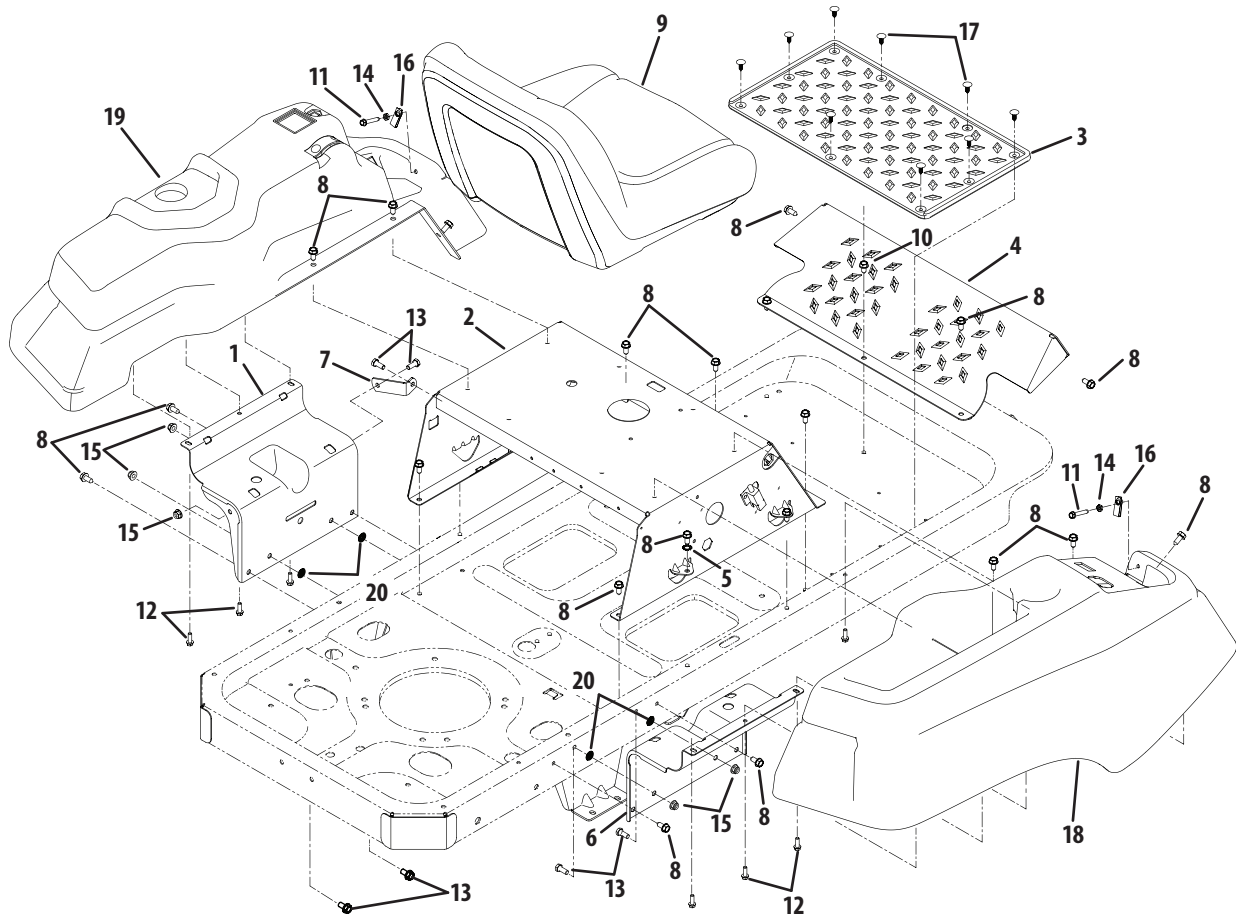

Ref	Part Number	Description
1	603-04564	Console Mount Bracket
2	603-04663	Seat Frame
3	735-04082B	Foot Pad
4	703-05373B	Foot Rest
5	736-0148	Lock Washer, $\frac{3}{8}$
6	703-06451	Console Mount Bracket
7	703-06623	Fuel Tank Support Bracket
8	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
9	757-04098	High-Back Seat
10	710-0604A	Hex Washer Screw, $\frac{5}{16}$ -18 x .825


Ref	Part Number	Description
11	710-0778	Hex Washer Screw, $\frac{1}{4}$ -20 x 1.500
12	710-0895	Hex Washer Screw, $\frac{1}{4}$ -15 x .750
13	710-3008	Hex Screw, $\frac{5}{16}$ -18 x .75
14	912-0298	Jam Nut, $\frac{1}{4}$ -20
15	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
16	712-04092	U-Type Nut, $\frac{1}{4}$ -20
17	726-3046	Ratchet Clip, .250
18	731-06233	RH Console
19	731-06263	LH Console
20	726-0201	Speed Nut, .3125

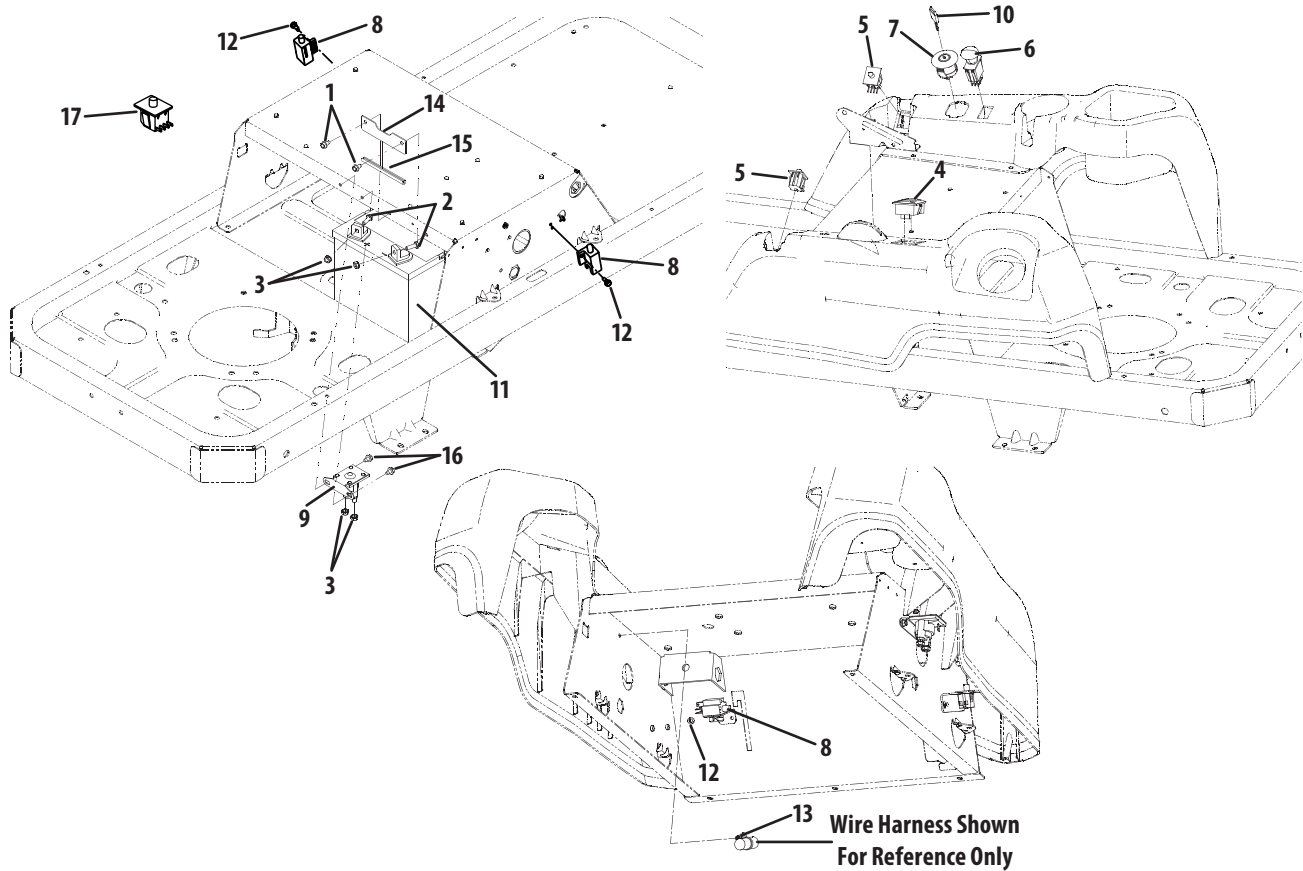

Ref.	Part Number	Description
1.	710-0599	Hex Screw, 1/4-20 x .5
2.	710-3015	Hex Screw, 1/4-20 x .75
3.	712-0271	Hex Nut, 1/4-20
4.	925-04022B	Hour Meter
5.	925-04165	Double Pole Neutral Switch
6.	925-04174	PTO Switch
7.	925-04228	Ignition Switch
8.	725-04363	Interlock Switch
9.	725-04439	Solenoid


Ref.	Part Number	Description
10.	925-1745A	Key
11.	925-1707D	Battery
12.	738-04237A	Shoulder Screw, #10-32 x .500
13.	726-0470	Cable Tie
14.	703-05894	Battery Hold-down
15.	731-0511	Trim Strip
16.	710-0653	Hex Screw, 1/4-20 x .375
17.	925-04040	Seat Switch

Front Axle

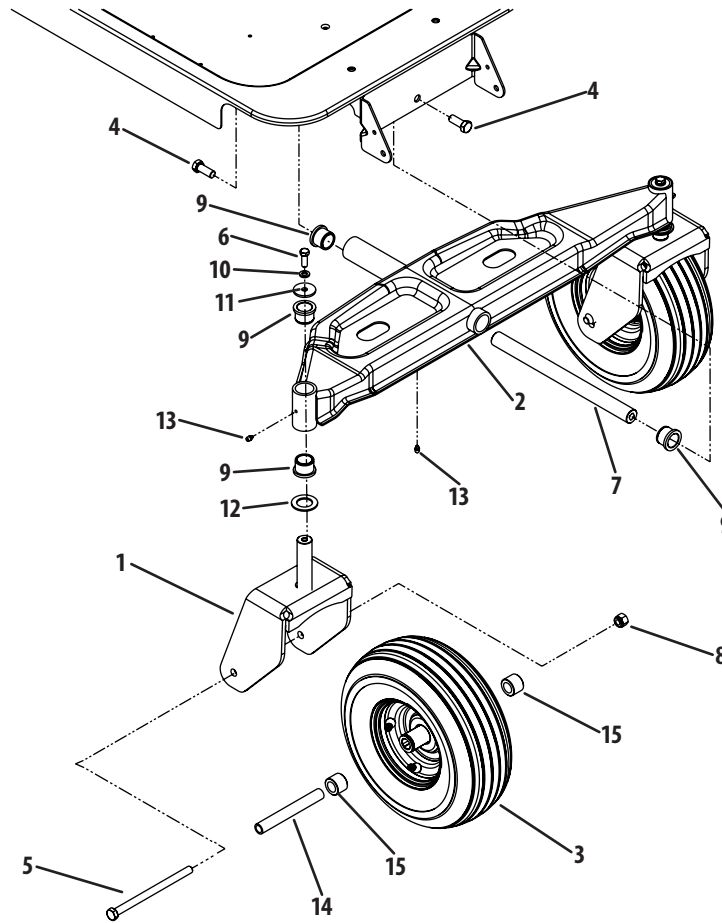

Ref.	Part Number	Description
1.	603-04370	Castor Wheel Bracket
2.	603-04385A	Front Pivot Axle
3.	634-04321A	Wheel Assembly, 13 x 5-6
—	734-04255A	Tire, 13 x 5-6
4.	710-04186	Hex Lock Screw, 1/2-13 x 1.25
5.	710-04652	Hex Cap Screw, 1/2-20 x 7.25
6.	710-0514	Hex Cap Screw, 3/8-16 x 1.0
7.	911-04228	Axle Shaft
8.	912-3058	Hex Insert Lock Nut, 1/2-13
9.	731-05500	Flange Bearing, 1.0 x 1.246
10.	936-0169	Lock Washer, 3/8
11.	936-0227	Flat Washer, .39 x 1.5 x .134
12.	736-0250	Flat Washer, 1.0 x 1.75 x .10
13.	937-3000	Lube Fitting, 3/16 Drive
14.	750-04775A	Spacer, .51 x .75 x 5.825
15.	750-04792	Hub, .76 x 1.23 x .92


Rear Drive & Wheels

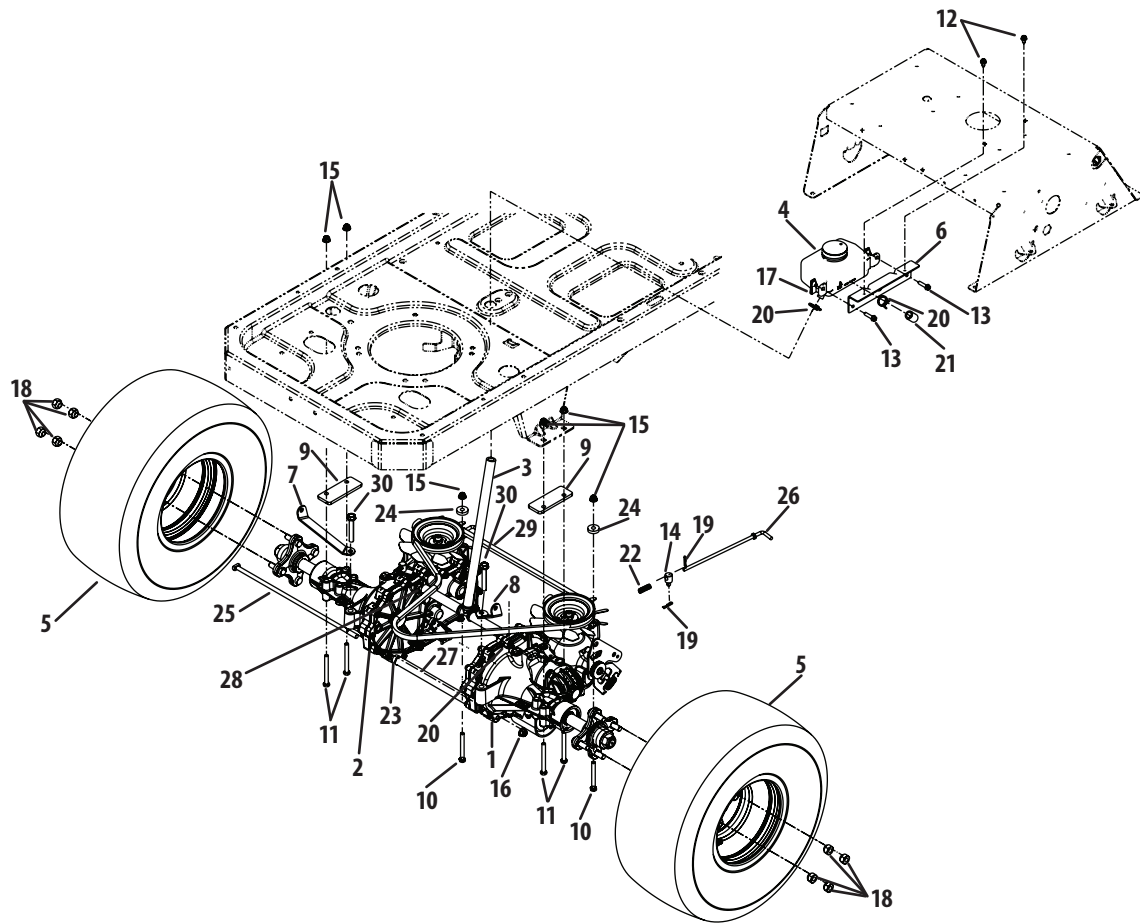

Ref.	Part Number	Description
1	918-04464	Transmission Assembly (RH)
2	918-04465	Transmission Assembly (LH)
3	618-04466	Breather
4	931-04223	Expansion Tank Assembly
5	N/A	Wheel Assembly, 20 x 10 x 8
—	934-0246A	Rim Assembly, 8.0 x 6.19 x 4
—	734-1873	Tire, 20 x 10 x 8
—	934-0255	Air Valve
6	703-05938A	Expansion Tank Bracket
7	703-05940	Transmission Brace (LH)
8	703-05941	Transmission Brace (RH)
9	703-05989	Transmission Spacer
10	710-0176	Hex Screw, $\frac{5}{16}$ -18 x 2.75
11	710-0189	Hex Screw, $\frac{5}{16}$ -18 x 3.00
12	710-0599	Screw, $\frac{1}{4}$ -20 x .500
13	710-0788	Screw, $\frac{1}{4}$ -20 x 1.000
14	711-1530	Ferrule, .325 x .312


Ref.	Part Number	Description
15	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
16	712-04065	Flange Lock Nut, $\frac{3}{8}$ -16
17	712-04092	Speed Nut, $\frac{1}{4}$ -20
18	712-3050	Lug Nut, $\frac{7}{16}$ -14
19	718-04040	Bow-Tie Cotter Pin
20	02001111	Hose Clamp, 1/2"
21	731-05785	Cap, $\frac{1}{2}$ x .870
22	732-0335	Compression Spring, .405 x 1.17
23	732-04434	Extension Spring, .545 x 4.555
24	736-04267	Flat Washer, .35 x 1.0 x .2
25	738-04251	Rod, .337 x 14.75
26	747-04636	Bypass Rod
27	750-04759A	Tube, $\frac{7}{16}$ x $\frac{3}{4}$ x 11.3
28	751-10511	Straight Fitting, $\frac{9}{16}$ x $\frac{1}{2}$
29	954-04043A	V-Type Belt
30	710-0395	Hex Screw, $\frac{5}{16}$ -18 x 3.00

Engine Connection

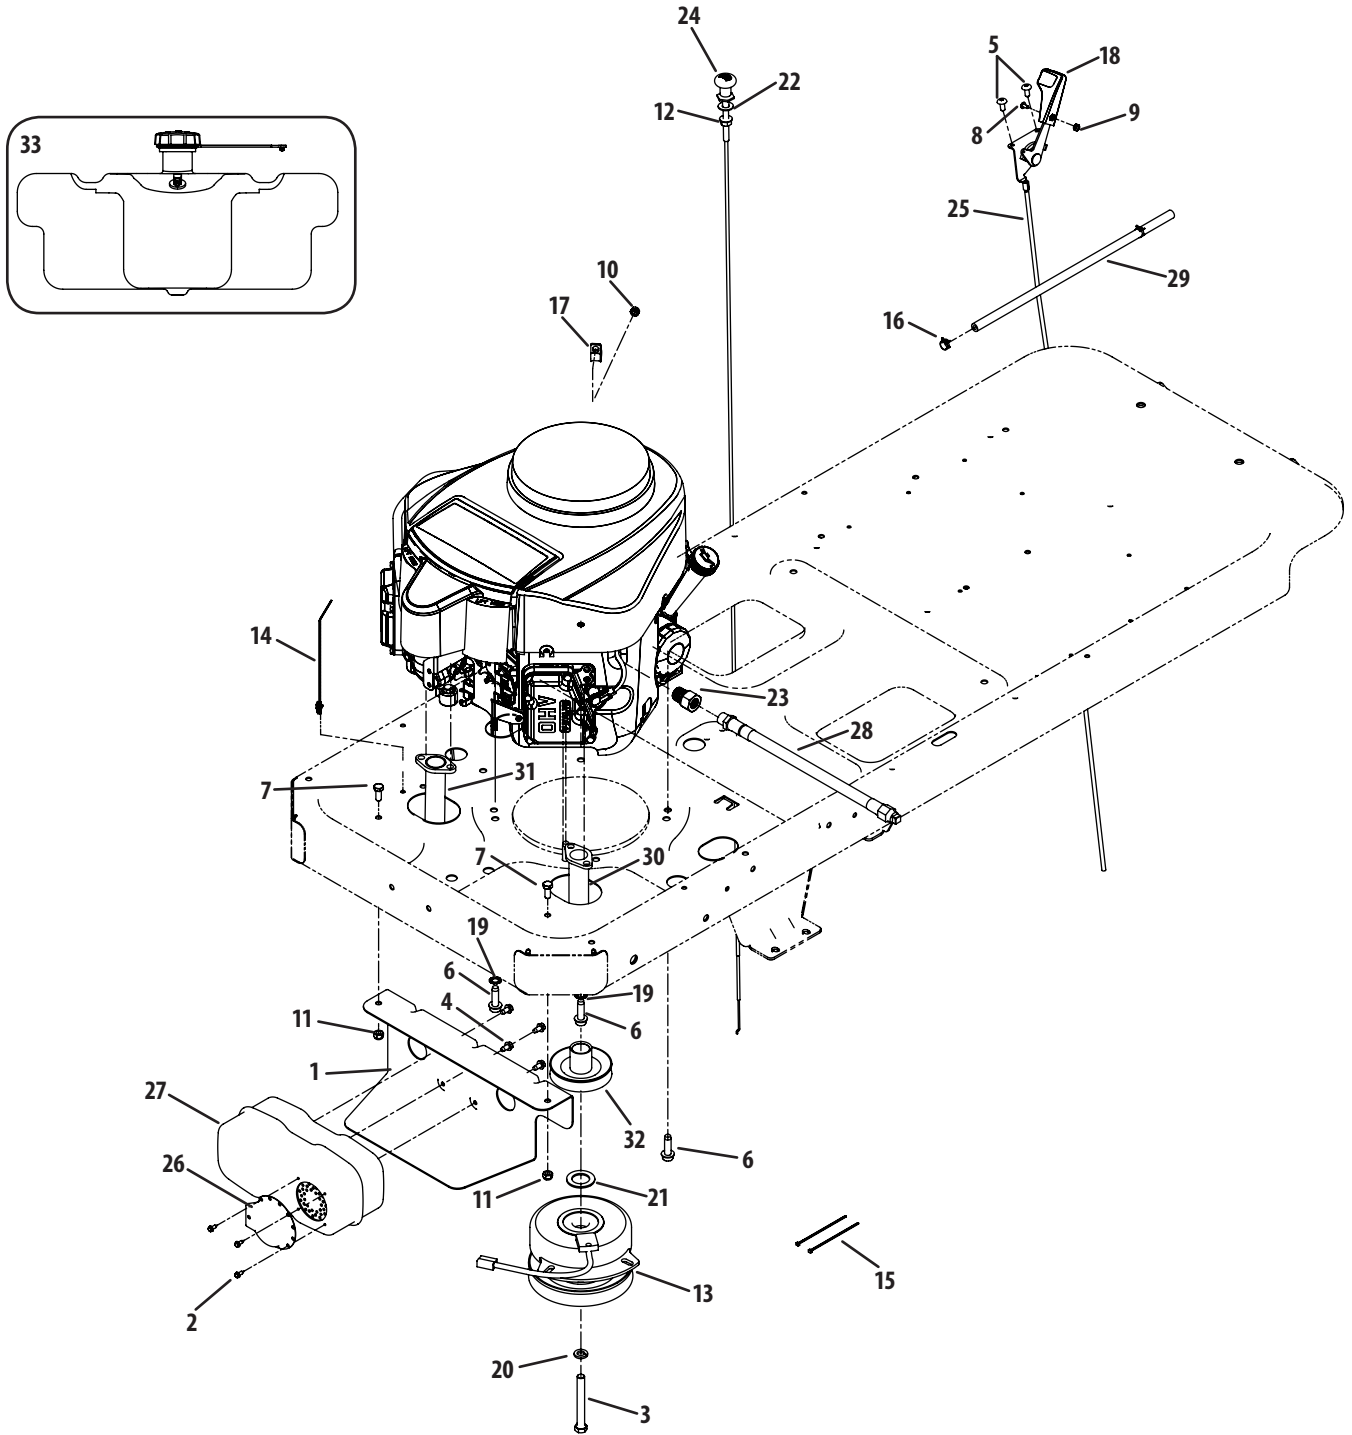

Ref.	Part Number	Description
1	703-05441A	Muffler Mounting Bracket
2	710-0227	Hex Washer Screw, #8-18 x .5
3	710-04379A	Hex Cap Lock Screw, 7/16-20 x 3.5
4	710-0599	Hex Washer Screw, 1/4-20 x .5
5	710-1017	AB Screw, 1/4-14 x .625
6	710-04683	Hex Washer Screw, 3/8-16 x 1.25
7	710-3008	Hex Cap Screw, 5/16-18 x .75
8	710-3217	Machine Screw, #8-32 x .375
9	712-0142	Hex Nut, #8-32
10	712-0271	Sems Nut, 1/4-20
11	912-0429	Hex Lock Nut, 5/16-18
12	912-3005	Flange Lock Nut, 3/8-16
13	917-1774C	Electric PTO Clutch
14	926-0154	Cable Tie
15	726-0197	Cable Tie
16	726-0205	Hose Clamp
17	726-0272	Clamp
18	731-04914	Throttle Control Knob
19	736-0148	Lock Washer, 3/8
20	936-0171	Lock Washer, 7/16
21	736-0277	Flat Washer, 1.031 x 1.620 x .095
22	936-0300	Flat Washer, .406 x .875 x .059
23	737-04138	Hex Fitting
24	946-04214	Choke Cable
25	946-04581	Throttle Cable
26	751-0564B	Muffler Deflector
27	751-0616B	Dual Inlet Muffler
28	751-10291	Oil Drain Hose
29	751-10349	Fuel Hose
30	751-10770	RH Exhaust Pipe
31	751-10771	LH Exhaust Pipe
32	756-04376	Electric PTO Engine Pulley
33	N/A	Fuel Tank Assembly
—	935-0149	Fuel Tank Bushing
—	751-10442	Fuel Pick-Up Bushing
—	751-10692	Fuel Tank
—	751-10703A	Fuel Cap


Deck Lift & Controls

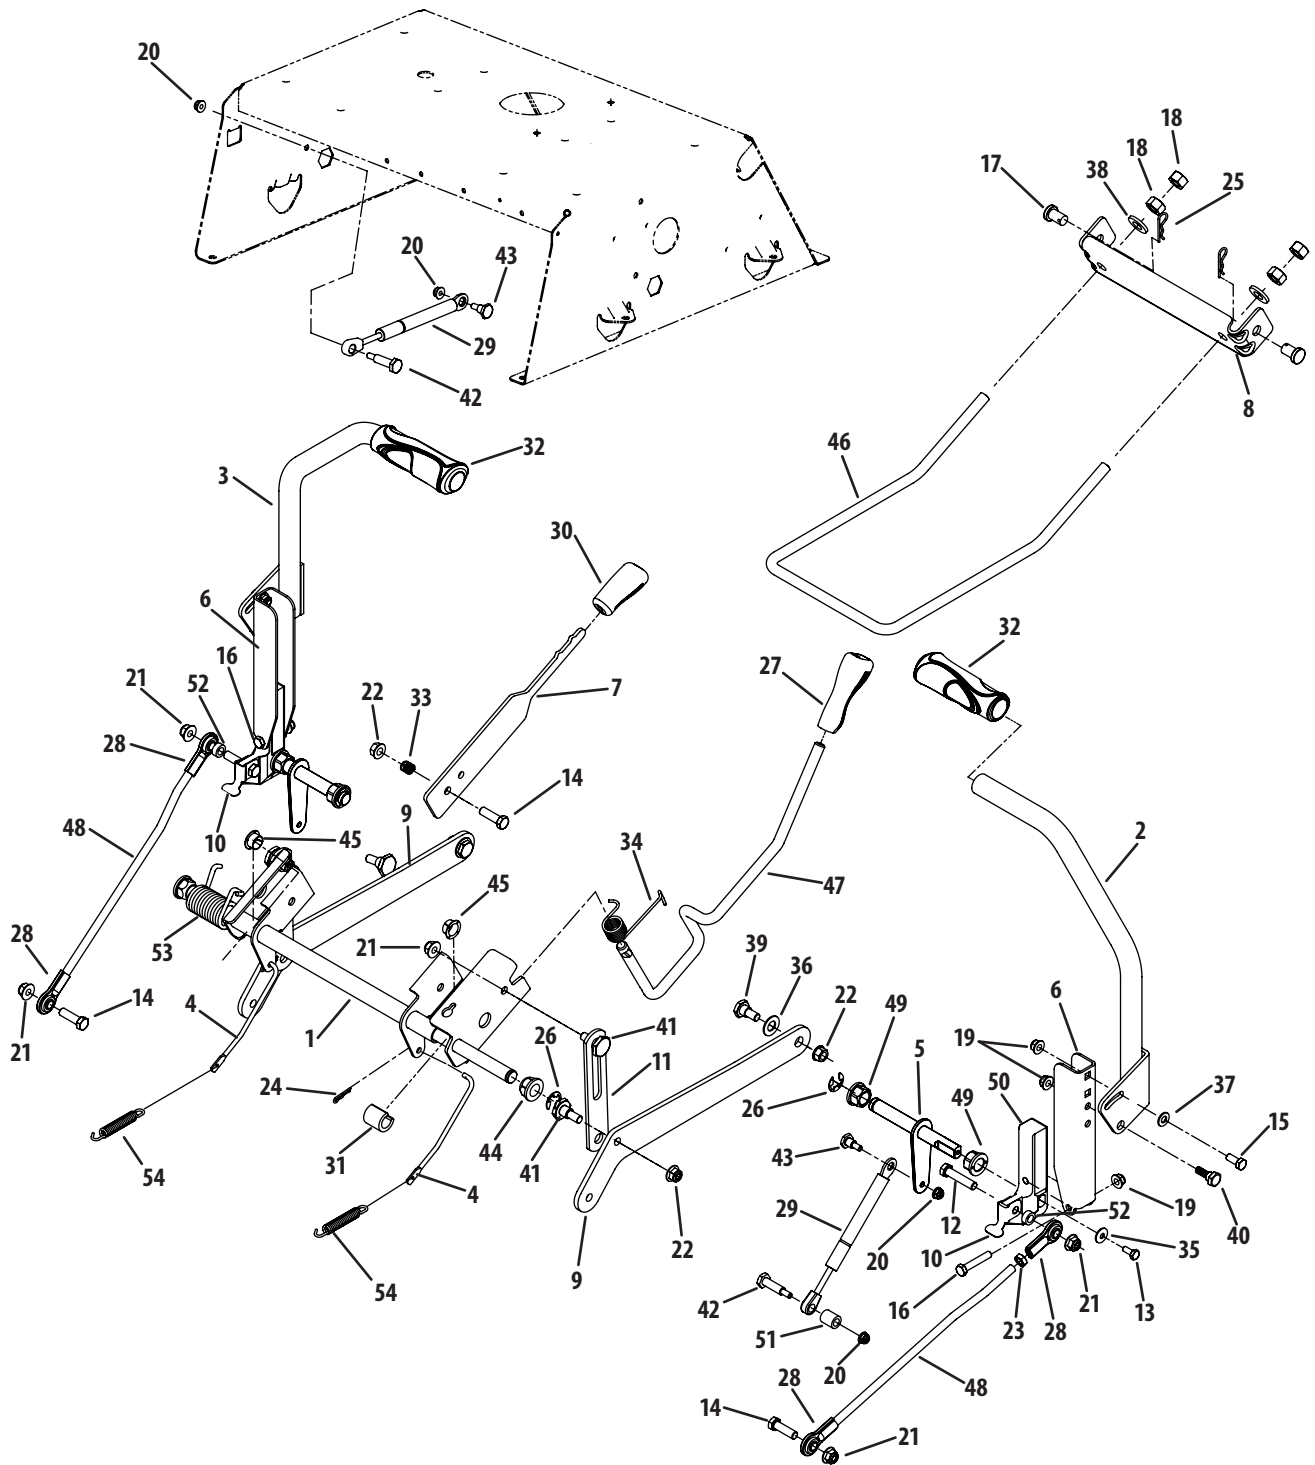

Deck Lift & Controls

Ref	Part Number	Description	Ref	Part Number	Description
1	603-04160B	Deck Lift Shaft Assembly	28	723-04035	Rod End
2	603-04322	Lapbar Lever RH	29	727-04141	Damper Cylinder
3	603-04324	Lapbar Lever LH	30	731-04735	Handle Grip
4	747-04651	Brake Rod	31	731-05732	Spacer, .62 x 1.0
5	647-04099A	Control Shaft	32	731-05882	Hand Grip
6	703-05387B	Lapbar Pivot Bracket	33	932-0334	Compression Spring
7	703-05396A	Brake Handle	34	732-0874	Torsion Spring
8	703-05414A	Front Deck Hanger Bracket	35	736-0270	Bell Washer, .265 x .75 x .062
9	703-05793A	Deck Lift Arm	36	936-0272	Flat Washer, .51 x 1.0 x .06
10	703-06096A	Switch Actuator Bracket	37	936-0275	Flat Washer, .344 x .688 x .065
11	703-06169	Lift Link Plate	38	736-3019	Flat Washer, .531 x 1.062 x .134
12	710-0347	Hex Screw, 3/8-16 x 1.75	39	738-0143	Shoulder Screw, .498 x .340 x 3/8-16
13	710-0433	Hex Lock Screw, 1/4-20 x .62	40	938-0296	Shoulder Screw, .437 x .268 x 5/16-18
14	710-3005	Hex Cap Screw, 3/8-16 x 1.25	41	938-0507B	Shoulder Screw, .5 x .434 x 3/8-16
15	710-3008	Hex Cap Screw, 5/16-18 x .75	42	938-0572	Shoulder Screw, .374 x 1.16 x 1/4-20
16	710-3180	Hex Cap Screw, 5/16-18 x 1.75	43	938-0974	Shoulder Screw, .375 x .38 x 1/4-20
17	911-0332	Clevis Pin, .50 x .78	44	941-0225	Hex Flange Bearing
18	912-0206	Hex Nut, 1/2-13	45	741-3074	Flange Bearing, .626 x .938 x .344
19	712-04063	Hex Flange Insert Lock Nut, 5/16-18	46	747-04401A	Deck Front Hanger Rod
20	712-04064	Hex Flange Insert Lock Nut, 1/4-20	47	747-04637	Deck Lift Handle Rod
21	712-04065	Hex Flange Insert Lock Nut, 3/8-16	48	747-05057	Lapbar Control Rod
22	912-0431	Hex Flange Lock Nut, 3/8-16	49	948-0227A	Hex Flange Bearing
23	912-3001	Jam Nut, 3/8-24	50	748-04169	Control Hub
24	714-04040	Bow-Tie Cotter Pin	51	750-04676	Spacer, .385 x .630 x .75
25	914-04023	Cotter Pin	52	750-04776	Spacer, .380 x .625 x .265
26	716-0106	E-Ring, .625 Dia.	53	732-04420	Torsion Spring
27	720-0311	Handle Grip	54	732-04432	Extension Spring, .59 x 4.00

Mower Deck

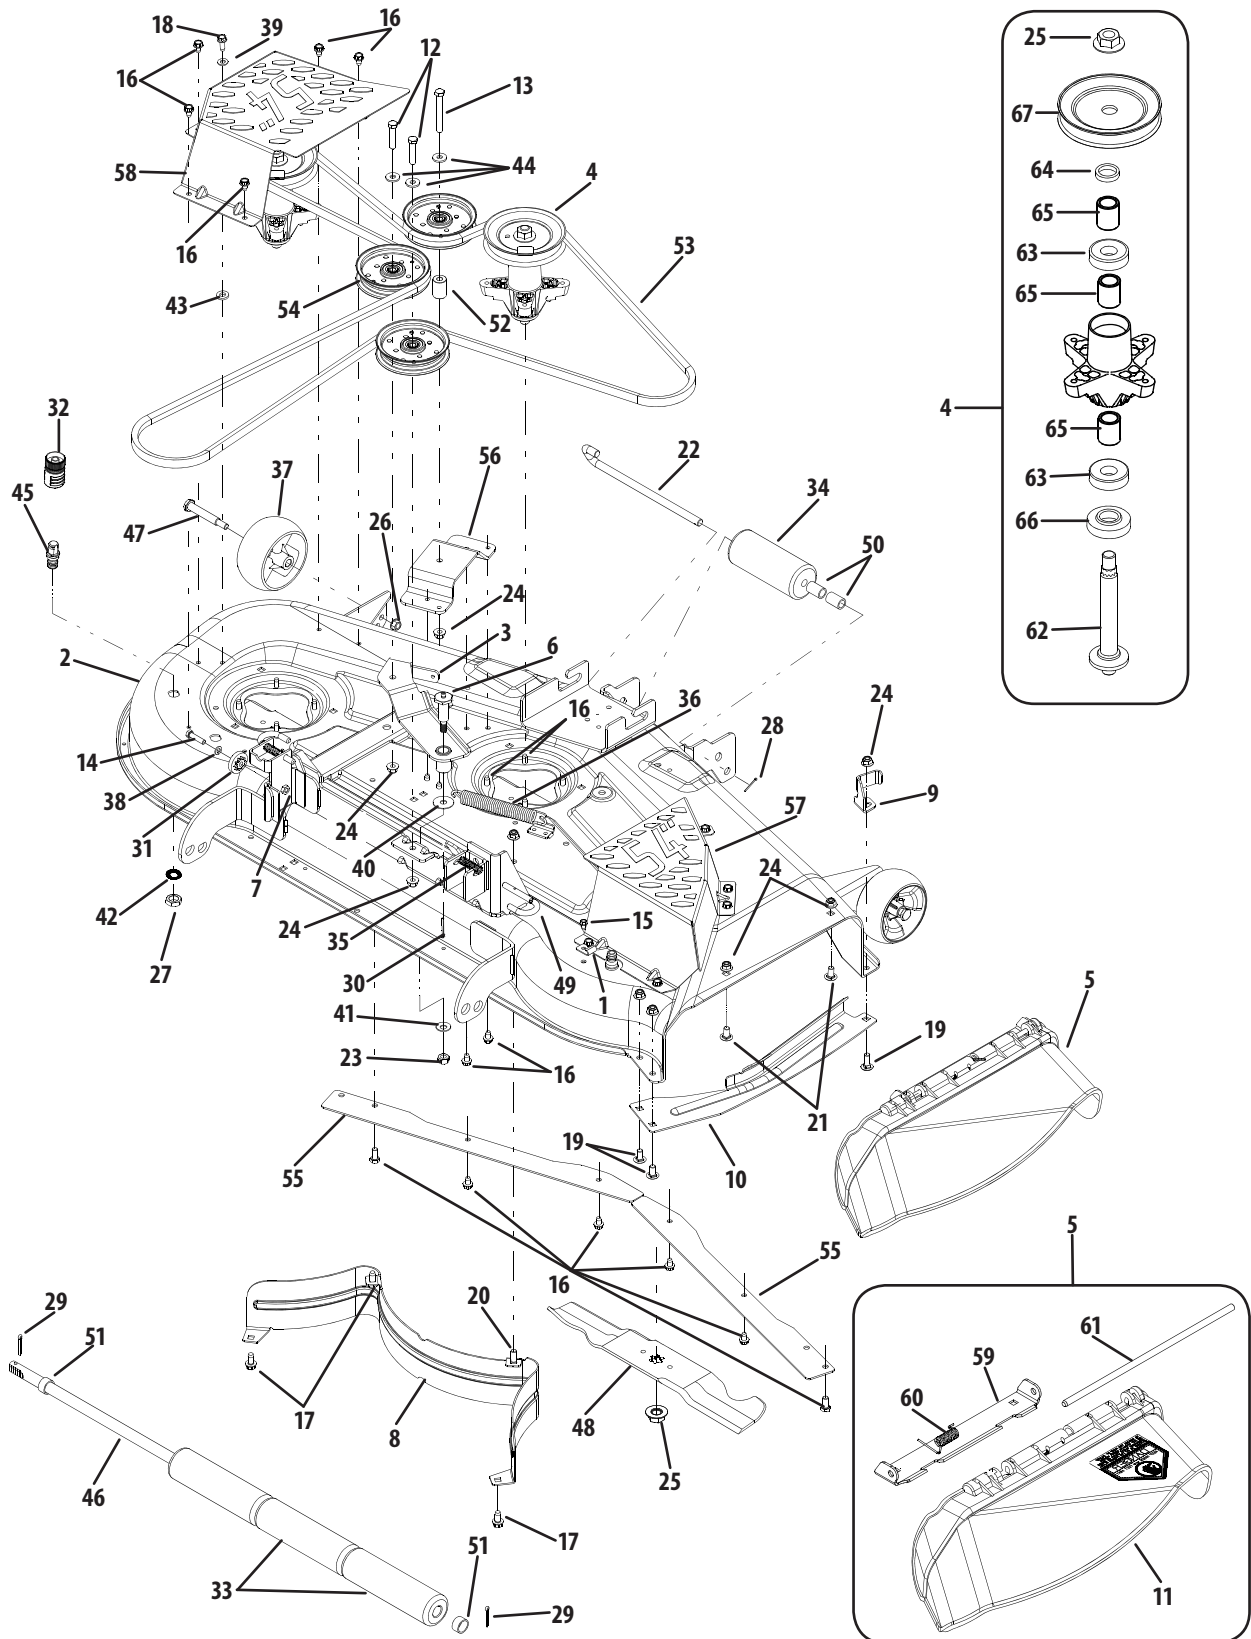


Mower Deck

Ref.	Part Number	Description
1.	96606	Retainer Bracket
2.	903-04603	Deck Housing
3.	603-04386A	Idler Assembly
4.	918-0971D	Spindle Assembly
5.	631-04070A	Discharge Chute Assembly
6.	638-04012A	Shoulder Bolt Assembly
7.	683-0254B	Deck Hanger Bracket
8.	703-2093	Rear Inner Baffle
9.	703-3279	Stop Bracket
10.	703-3511A	Finger Guard
11.	631-04070A	Chute Deflector
12.	710-0347	Hex Cap Screw, 3/8-16 x 1.75
13.	710-0521	Hex Cap Screw, 3/8-16 x 3.0
14.	710-0528	Hex Cap Screw, 5/16-18 x 1.25
15.	710-0599	Hex Washer Screw, 1/4-20 x .5
16.	710-04484	Hex Washer Screw, 5/16-18 x .750
17.	710-0623	Hex Washer Screw, 3/8-16 x .75
18.	710-0650	Hex Washer Screw, 5/16-18 x .875
19.	710-04095	Hex Screw, 3/8-16 x 1.00
20.	710-3168	Carriage Screw, 3/8-16 x 1.0
21.	710-3178	Carriage Screw, 3/8-16 x .75
22.	711-1737	Roller Pin, .5 x 10.06
23.	712-0290	Hex Lock Nut, 7/16-14
24.	712-04065	Hex Insert Flange Lock Nut, 3/8-16
25.	712-0417A	Hex Flange Nut, 5/8-18
26.	912-0431	Hex Flange Lock Nut, 3/8-16
27.	912-0641	Hex Nut, M16-1.5
28.	914-0111	Cotter Pin, 3/32 x 1.0
29.	714-0162	Cotter Pin, 5/32 x 1.25
30.	914-0470	Cotter Pin, 1/8 x 1.25
31.	917-04074	Deck Adjustment Gear
32.	921-04041	Water Nozzle Adapter
33.	731-05825	Deck Roller, 7.895
34.	731-05679	Front Roller

Ref.	Part Number	Description
35.	732-04652	Compression Spring, .535 x 1.751
36.	732-04609	Extension Spring, .94 x .04609
37.	734-04155	Deck Ball Wheel, 5.0
38.	936-0119	Lock Washer, 5/16
39.	936-0275	Flat Washer, .344 x .688 x .065
40.	936-0406	Flat Washer, .442 x 1.39 x .06
41.	736-0407	Bell Washer, .45 x 1.0 x .062
42.	936-0760	Lock Washer
43.	736-3010	Flat Washer, .407 x .812 x .135
44.	736-3072	Flat Washer, .38 x .93 x .110
45.	737-04003D	Deck Wash Nozzle
46.	738-04260	Shaft, .75 x 26.893
47.	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
48.	942-0677B	Blade, 18.5
49.	747-1116	Deck Hanger Rod
50.	950-0151	Spacer, .55 x .75 x 1.125
51.	950-0212	Spacer, .82 x 1.0 x .53
52.	750-04597	Spacer, .38 x .9 x 1.313
53.	954-04138A	V-Belt
54.	756-04129B	Idler Pulley, 4.25 Dia
55.	783-04690B	Deck Skirt
56.	783-04726	Stationary Idler Bracket
57.	783-1470A	Belt Cover, RH
58.	783-1471	Belt Cover, LH
59.	783-05030	Chute Bracket
60.	732-04372	Torsion Spring
61.	711-04565	Hinge Pin
62.	738-1197	Spindle Shaft, 6.95
63.	941-0919	Ball Bearing
64.	748-0160A	Spacer, .79 x 1.25 x .175
65.	750-1000	Spacer, .80 x 1.10 x 1.32
66.	750-1349A	Spacer, .79 x 1.82 x .55
67.	756-04216	V-Type Pulley, 5.39


Seat Adjustment

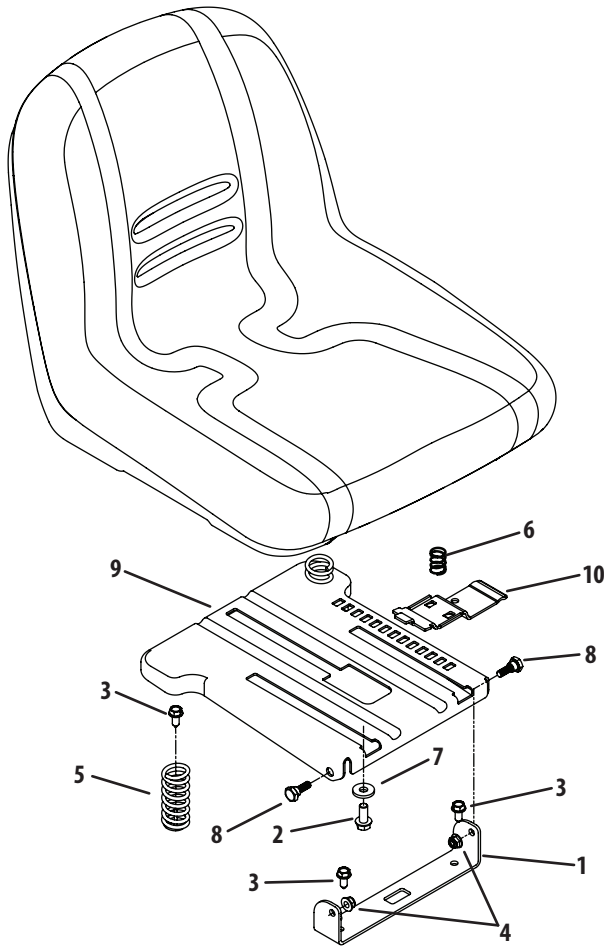

Ref.	Part Number	Description
1.	703-06941	Seat Bracket
2.	710-04482	Hex Flange Bolt, $\frac{3}{8}$ -16 x .875
3.	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
4.	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
5.	732-04035	Compression Spring
6.	732-04563	Compression Spring
7.	736-0258	Flat Washer, .385 x 1.0 x .135
8.	938-0296	Shoulder Screw, .437 x .268 x $\frac{5}{16}$ -18
9.	783-06049	Seat Mount Bracket
10.	783-06050	Seat Adjustment Lever

Kawasaki FR691V-AS05 Valve/Camshaft

E0130-A176A

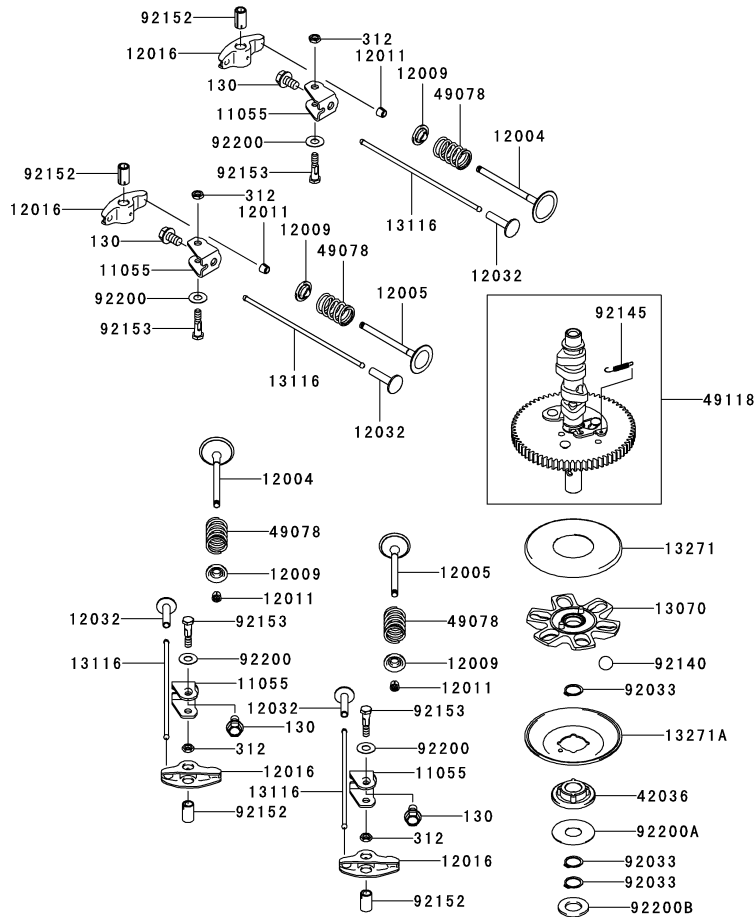


Ref.	Part Number	Description
11055	KM-11055-7009	Bracket
12004	KM-12004-7008	Intake Valve
12005	KM-12005-7009	Exhaust Valve
12009	KM-12009-7001	Valvespring Retainer
12011	KM-12011-2056	Collet
12016	KM-12016-2066	Rocker Arm
12032	KM-12032-7001	Tappet
13070	KM-13070-7017	Governor Guide
13116	KM-13116-7007	Push Rod
13271	KM-13271-7007	Plate
13271A	KM-13271-7021	Governor Plate
42036	KM-42036-7010	Sleeve

Ref.	Part Number	Description
49078	KM-49078-7002	Engine Valve Spring, IN
49118	KM-49118-7022	Complete Camshaft
92033	KM-92033-7001	Snap Ring
92140	KM-92140-7005	Ball
92145	KM-92145-7001	Spring
92152	KM-92152-7012	Collar
92153	KM-92153-7100	Bolt, 6 X 29.5
92200	KM-92200-2151	Washer, 8.1 X 18 X 0.5
92200A	KM-92200-7009	Washer, 16 X 42 X 0.91
92200B	KM-92200-7048	Washer, 16.3 X 30 X 2.28
130	KM-130AA0814	Flanged Bolt, 8 X 14
312	KM-312AA0600	Hex Nut, 6mm

Kawasaki FR691V-AS05 Piston/Crankshaft


E0120-A398A

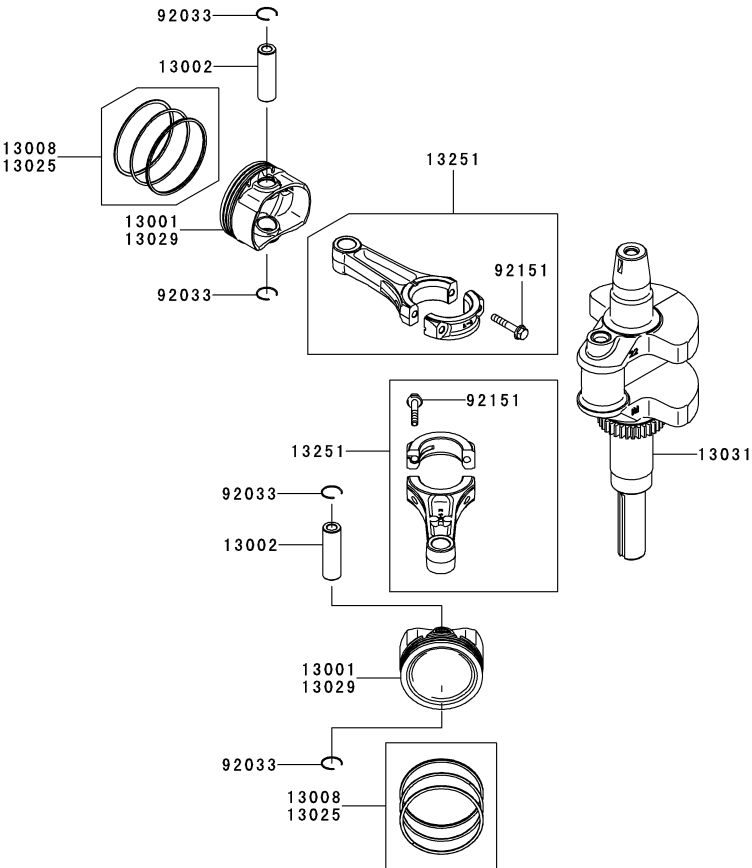

Ref.	Part Number	Description
13001	KM-13001-7027	Engine Piston
13002	KM-13002-7006	Piston Pin
13008	KM-13008-7005	Piston Ring Set
13025	KM-13025-7009	Piston Ring Set, L ,0.5
13029	KM-13029-7010	Engine Piston, L, 0.5
13031	KM-13031-7084	Complete Crankshaft
13251	KM-13251-7025	Connecting Rod Assembly
92033	KM-92033-7016	Snap Ring
92151	KM-92151-7017	Bolt, 6 X 35

Kawasaki FR691V-AS05 Cylinder/Crankcase

E0110-A630A

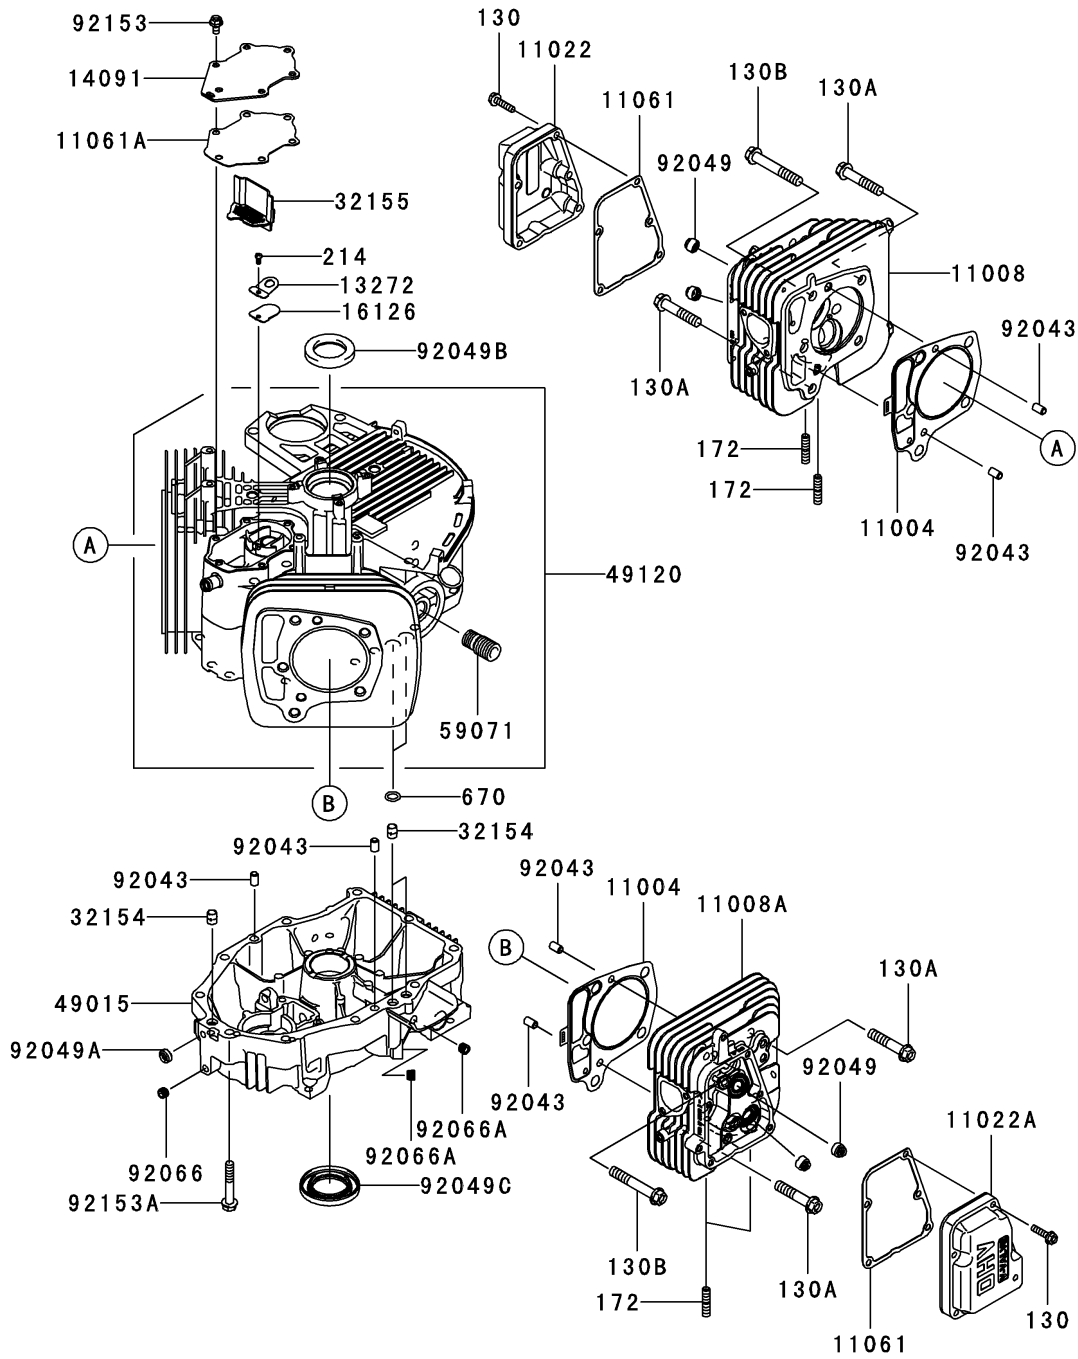


Kawasaki FR691V-AS05 Cylinder/Crankcase

Ref.	Part Number	Description
11004	KM-11004-7026	Head Gasket
11008	KM-11008-7039	Complete Cylinder Head, #1
11008A	KM-11008-7040	Complete Cylinder Head, #2
11022	KM-11022-7019	Rocker Case, #1
11022A	KM-11022-7020	Rocker Case, #2
11061	KM-11061-7083	Rocker Case Gasket
11061A	KM-11061-7084	Breather Gasket
13272	KM-13272-7004	Breather Plate
14091	KM-14091-7064	Breather Cover
16126	KM-16126-7020	Breather Valve
32154	KM-32154-7019	Pipe
32155	KM-32155-7003	Breather Pipe
49015	KM-49015-7079	Crankcase Cover
49120	KM-49120-7122	Complete Crankcase
59071	KM-59071-2079	Joint
92043	KM-92043-1263	Pin
92049	KM-92049-7001	Oil Seal, RVC 26 x 11 x 10.2
92049A	KM-92049-7005	Oil Seal, SO 8 x 14 x 5 HS
92049B	KM-92049-7010	Oil Seal, SD 35 x 48 x 8 RHS
92049C	KM-92049-7028	Oil Seal, 38 x 62 x 8 MTCLV
92066	KM-92066-7023	Plug
92066A	KM-92066-7026	Plug
92153	KM-92153-7043	Bolt, 6 x 12
92153A	KM-92153-7054	Bolt, 8 x 50
130	KM-130AA0625	Flanged Bolt, 6 x 25
130A	KM-130CA1050	Flanged Bolt, 10 x 50
130B	KM-130CA1065	Flanged Bolt, 10 x 65
172	KM-172BA0818	Stud Bolt, 8 x 18
214	KM-214AA0408	Pan Screw +-, 4 x 8
670	KM-670B2011	O-Ring, 11mm

Kawasaki FR691V-AS05 Cooling Equipment


E0150-A873A

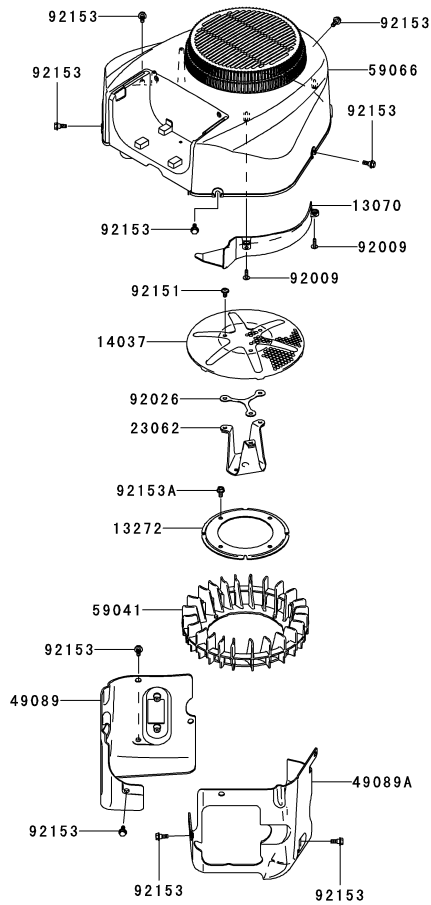

Ref.	Part Number	Description
13070	KM-13070-7019	Cooling Air Guide
13272	KM-13272-7006	Fan Plate
14037	KM-14037-70089H	Screen
23062	KM-23062-7005	Complete Bracket
49089	KM-49089-7079	Engine Shroud
49089A	KM-49089-7080	Engine Shroud
59041	KM-59041-7014	Fan
59066	KM-59066-7046	Fan Housing
92009	KM-92009-2303	Screw
92026	KM-92026-7007	Spacer
92151	KM-92151-7012	Bolt, 6 X 12
92153	KM-92153-7007	Bolt
92153A	KM-92153-7043	Bolt, 6 X 12

Kawasaki FR691V-AS05 Lubrication Equipment



E0140-A447A

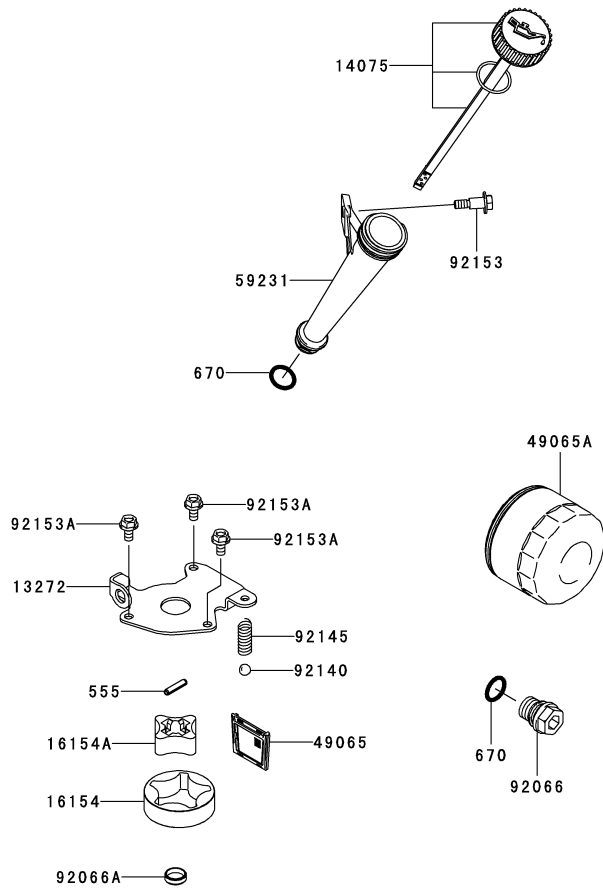

Ref.	Part Number	Description
13272	KM-13272-7011	Rotor Plate
14075	KM-14075-7013	Oil Gauge Cap Assembly
16154	KM-16154-7010	Outer Pump Rotor
16154A	KM-16154-7011	Inner Pump Rotor
49065	KM-49065-7006	Oil Filter
49065A	KM-49065-7007	Oil Filter
59231	KM-59231-7016	Filler
92066	KM-92066-7003	Plug
92066A	KM-92066-7028	Plug
92140	KM-92140-7003	Ball
92145	KM-92145-7002	Spring
92153	KM-92153-7008	Bolt
92153A	KM-92153-7043	Bolt, 6 X 12
555	KM-555A0420	Spring Pin, 4 X 20
670	KM-670D2016	O-Ring, 16mm

Kawasaki FR691V-AS05 Control Equipment

E0170-A652A

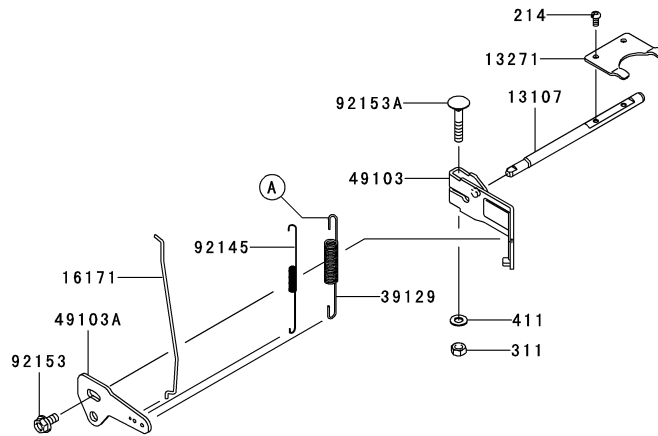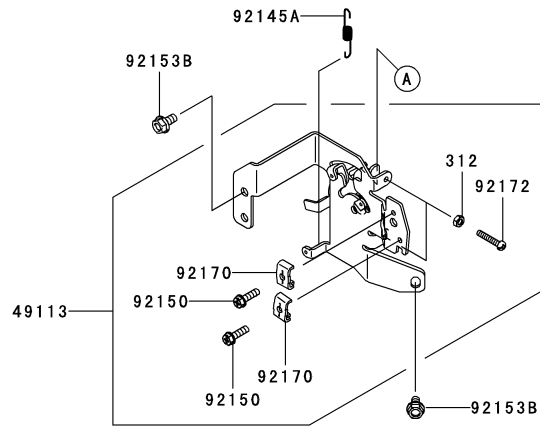


Ref.	Part Number	Description
13107	KM-13107-7047	Shaft
13271	KM-13271-7038	Plate
16171	KM-16171-7022	Link
39129	KM-39129-7028	Governor Spring
49103	KM-49103-7014	Governor Arm
49103A	KM-49103-7015	Governor Arm
49113	KM-49113-7050	Complete Control Panel
92145	KM-92145-7057	Spring
92145A	KM-92145-7058	Spring
92150	KM-92150-2182	Bolt, 5 X 18

Ref.	Part Number	Description
92153	KM-92153-0009	Bolt, 6 X 12
92153A	KM-92153-7033	Bolt, 6 X 35
92153B	KM-92153-7043	Bolt, 6 X 12
92170	KM-92170-7001	Clamp
92172	KM-92172-7035	Screw, 5 X 30
214	KM-214AA0408	Pan Screw +-, 4 X 8
311	KM-311AA0600	Hex Nut, 6mm
312	KM-312AA0500	Hex Nut, 5mm
411	KM-411AA0600	Plain Washer, 6mm

Kawasaki FR691V-AS05 Electric Equipment

E0160-B284A

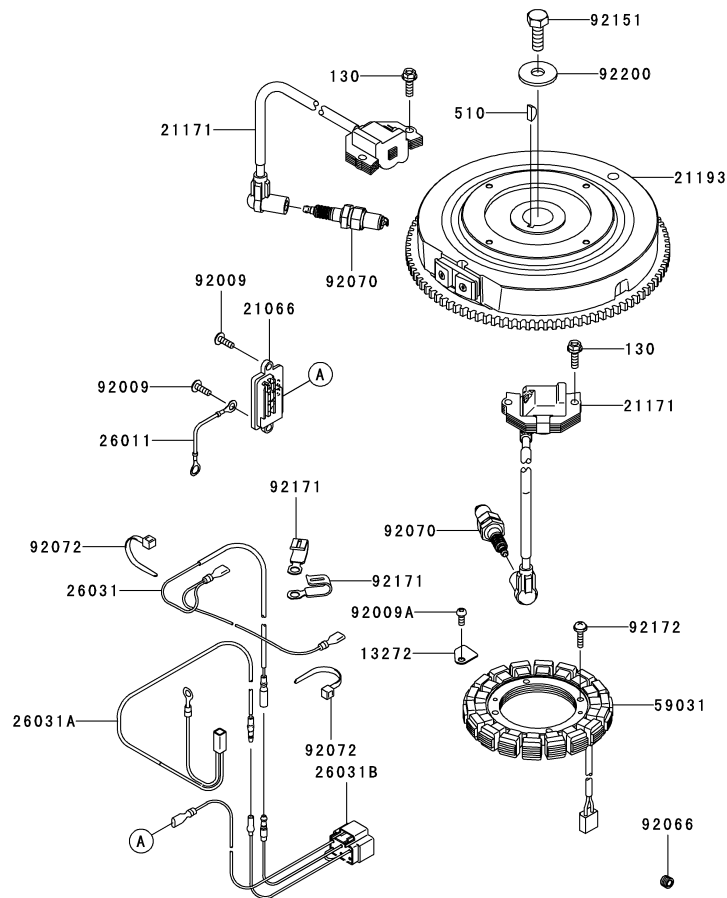


Ref.	Part Number	Description
13272	KM-13272-7012	Plate
21066	KM-21066-7017	Voltage Regulator
21171	KM-21171-7041	Ignition Coil Assembly
21193	KM-21193-7038	Flywheel Assembly
26011	KM-26011-7025	Lead Wire, L = 95
26031	KM-26031-7040	Harness
26031A	KM-26031-7041	Harness
26031B	KM-26031-7044	Harness
59031	KM-59031-7017	Charging Coil
92009	KM-92009-2303	Screw

Ref.	Part Number	Description
92009A	KM-92009-2308	Screw
92066	KM-92066-7026	Plug
92070	759-3339	Spark Plug
92072	KM-92072-7003	Band
92151	KM-92151-2097	Bolt, 12 X 30
92171	KM-92171-7008	Clamp
92172	KM-92172-7018	Screw, 5 X 20
92200	KM-92200-7002	Washer
130	KM-130AA0620	Flanged Bolt, 6 X 20
510	KM-510A5100	Woodruff Key

Kawasaki FR691V-AS05 Air Filter/Muffler


E0190-B094A

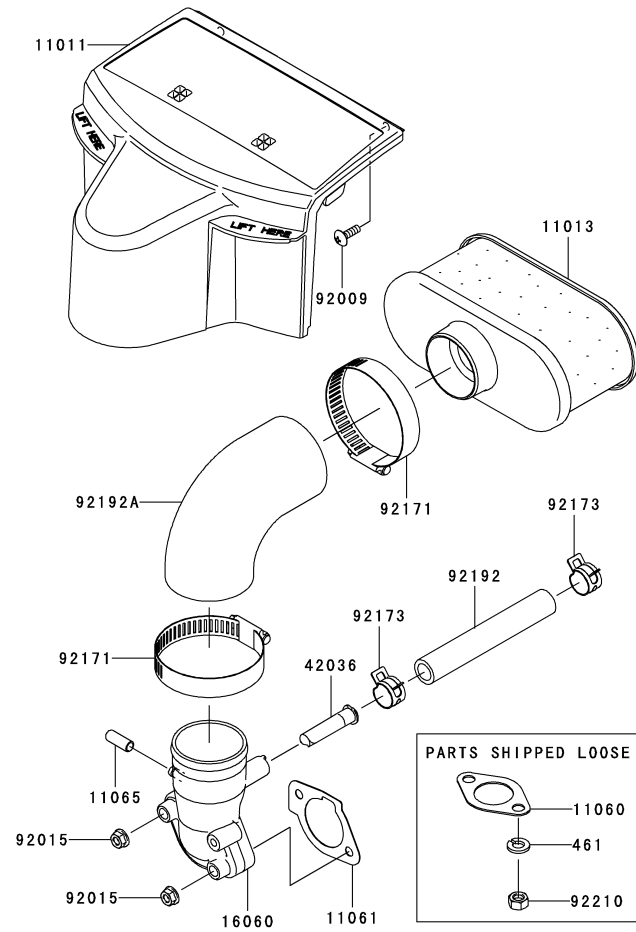

Ref.	Part Number	Description
11011	KM-11011-7054	Air Filter Case
11013	KM-11013-7047	Air Filter Element
11060	KM-11060-7016	Muffler Gasket
11061	KM-11061-7086	Carburetor/Pipe Intake Gasket
11065	KM-11065-7023	Cap
16060	KM-16060-7038	Intake Pipe
42036	KM-42036-7017	Breather Sleeve
92009	KM-92009-2303	Screw
92015	KM-92015-1367	Nut
92171	KM-92171-7007	Clamp
92173	KM-92173-7003	Clamp
92192	KM-92192-7146	Tube, 12.6 X 18.6 X 118
92192A	KM-92192-7151	Air Filter Tube
92210	KM-92210-7027	Nut, M8
461	KM-461DA0800	Spring Washer, 8mm

Kawasaki FR691V-AS05 Carburetor

E0180-A778A

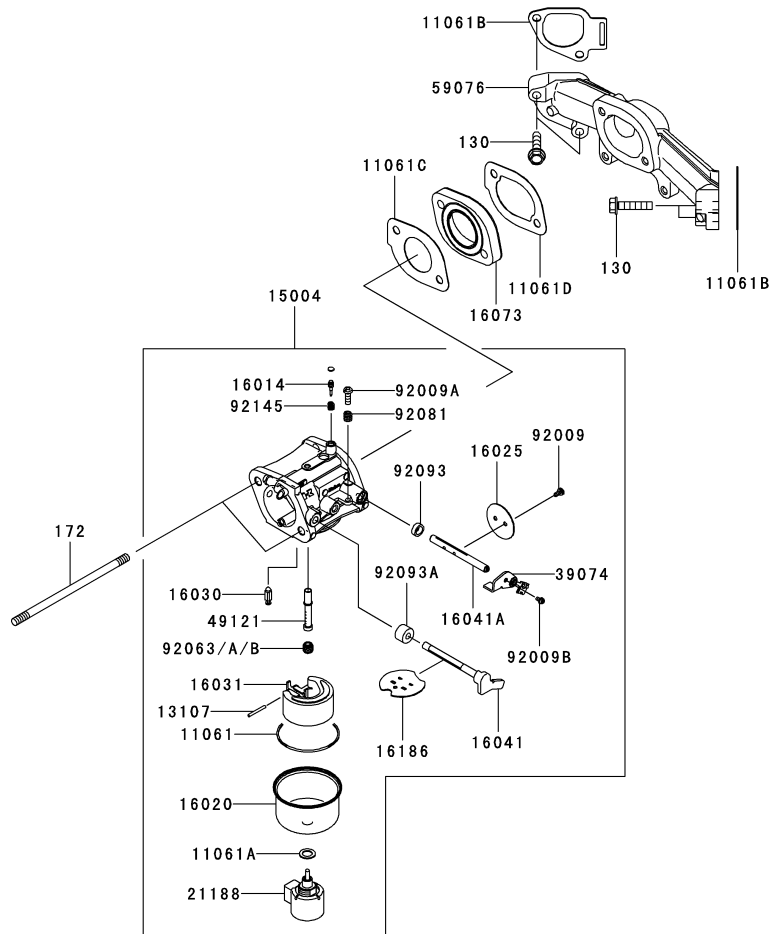


Ref.	Part Number	Description
11061	KM-11061-7009	Chamber Gasket
11061A	KM-11061-7010	Screw Gasket
11061B	KM-11061-7085	Manifold Gasket
11061C	KM-11061-7087	Insulator Gasket
11061D	KM-11061-7088	Insulator/Manifold Gasket
13107	KM-13107-7018	Shaft
15004	KM-15004-7063	Carburetor Assembly
16014	KM-16014-7010	Pilot Air Screw
16020	KM-16020-7003	Float Chamber
16025	KM-16025-7017	Throttle Valve
16030	KM-16030-7003	Float Valve
16031	KM-16031-7002	Float
16041	KM-16041-7050	Choke Carburetor Shaft
16041A	KM-16041-7051	Throttle Carburetor Shaft
16073	KM-16073-7013	Insulator
16186	KM-16186-7006	Choke Valve Assembly

Ref.	Part Number	Description
21188	KM-21188-7002	Solenoid
39074	KM-39074-7001	Throttle Lever Assembly
49121	KM-49121-7018	Main Nozzle
59076	KM-59076-7019	Intake Manifold
92009	KM-92009-2083	Screw
92009A	KM-92009-2349	Screw
92009B	KM-92009-2402	Screw
92063	KM-92063-7141	Main Jet, #122
92063A	KM-92063-7142	Main Jet, #124
92063B	KM-92063-7149	Main Jet, #120
92081	KM-92081-2234	Spring
92093	KM-92093-2100	Seal
92093A	KM-92093-7003	Seal
92145	KM-92145-2122	Spring
130	KM-130AA0630	Flanged Bolt, 6 X 30
172	KM-172BA06115	Stud Bolt, 6 X 115

Kawasaki FR691V-AS05 Carburetor


E0210-A452A

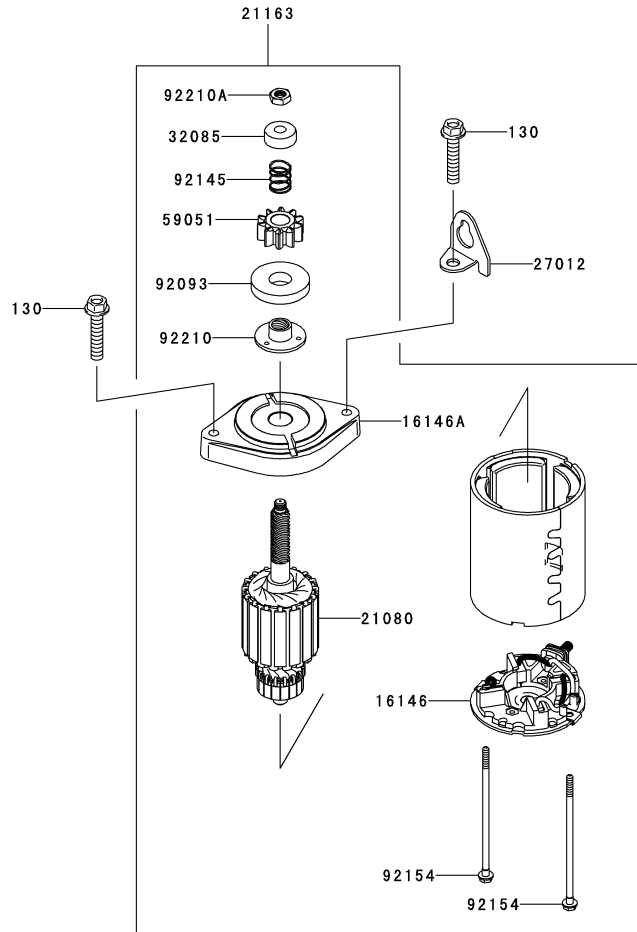

Ref.	Part Number	Description
16146	KM-16146-7027	Cover Assembly
16146A	KM-16146-7028	Cover Assembly
21080	KM-21080-7006	Armature
21163	KM-21163-7024	Electric Starter
27012	KM-27012-7004	Hook
32085	KM-32085-7004	Stopper
59051	KM-59051-7034	Spur Gear
92093	KM-92093-7007	Seal
92145	KM-92145-7060	Spring
92154	KM-92154-7001	Bolt
92210	KM-92210-7017	Nut
92210A	KM-92210-7036	Nut
130	KM-130AA0840	Flanged Bolt, 8 X 40

Kawasaki FR691V-AS05 Fuel Tank/Fuel Valve

E0200-A679A

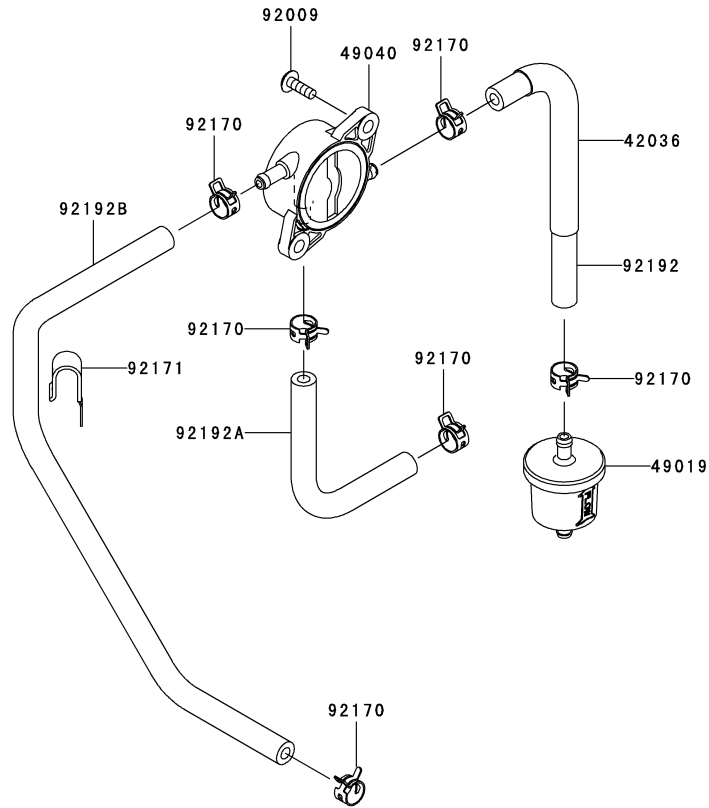


Ref.	Part Number	Description
42036	KM-42036-7015	Sleeve
49019	KM-49019-7005	Fuel Filter
49040	KM-49040-7008	Fuel Pump
92009	KM-92009-2303	Screw
92170	KM-92170-2009	Clamp
92171	KM-92171-7008	Clamp
92192	KM-92192-7145	Tube, 6.35 X 12.7 X 185
92192A	KM-92192-7148	Tube, 6.4 X 12.7 X 150
92192B	KM-92192-7150	Tube, 6.35 X 12.7 X 390

Kawasaki FR691V-AS05 Engine Labels

56033




56070

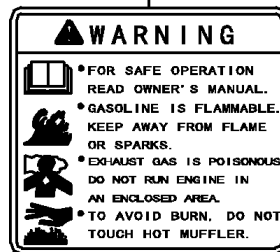

Ref.	Part Number	Description
56033	KM-56033-7001	Manual Label
56070	KM-56070-7001	Warning Label

Electrical Schematic

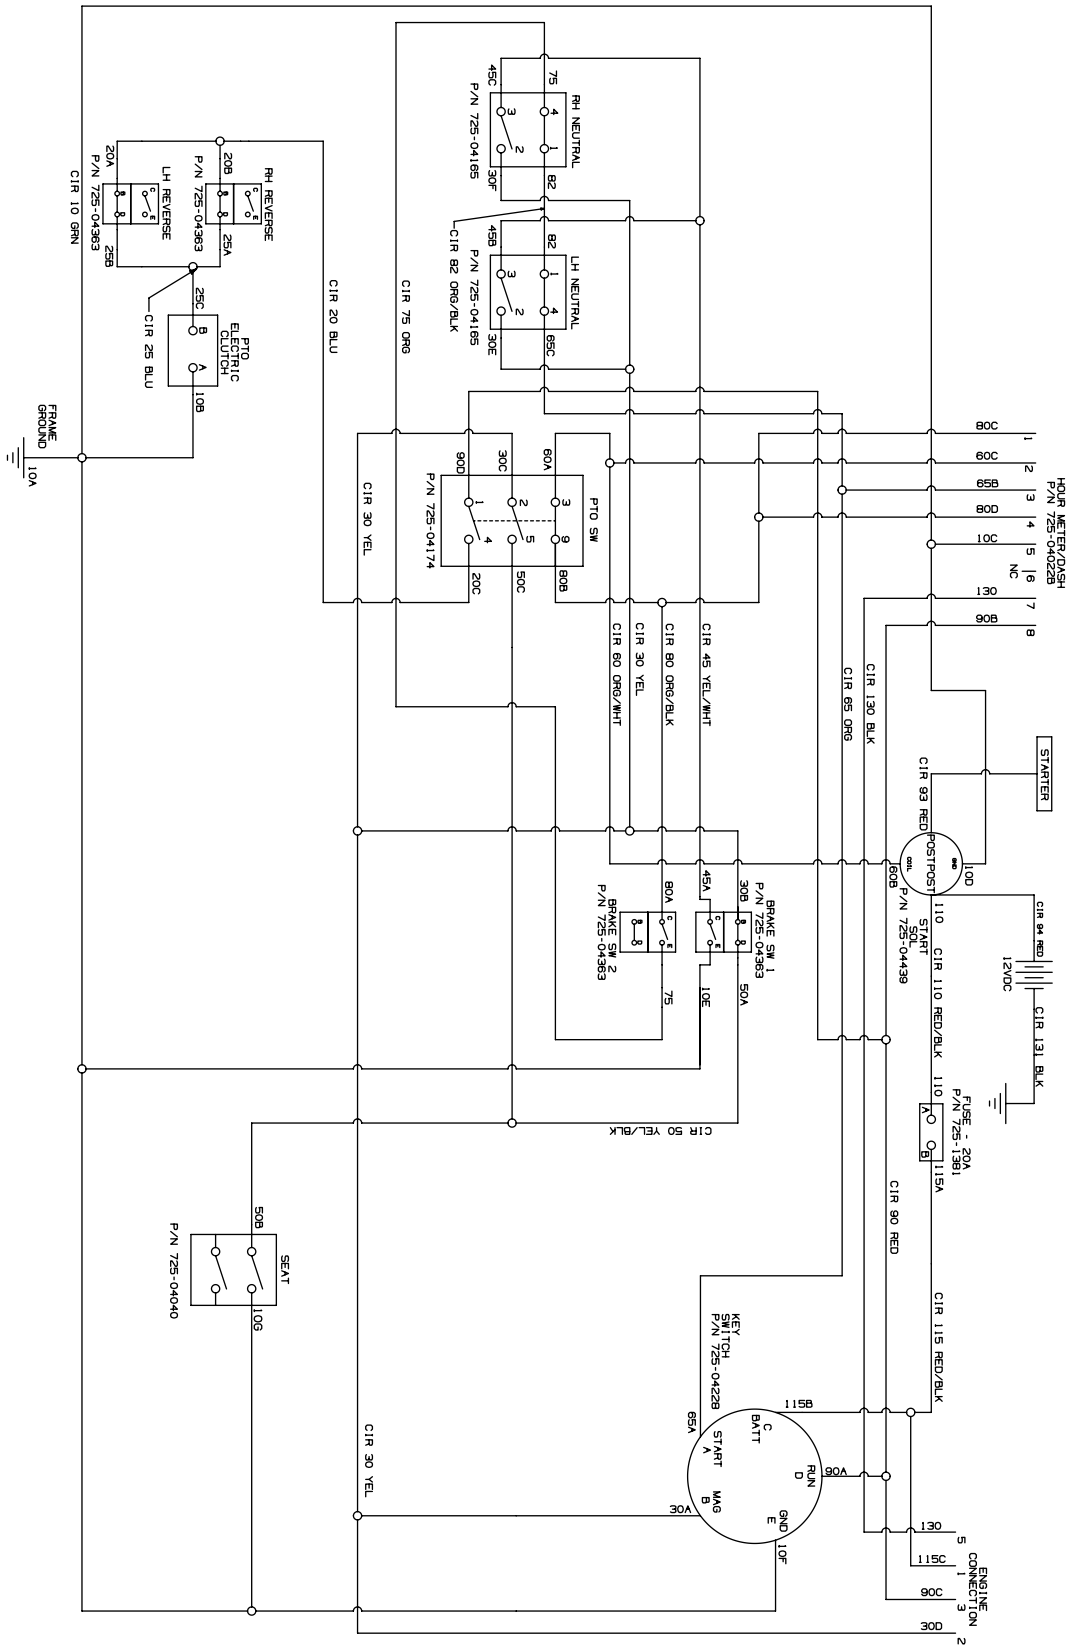

Labels


777D13930



777122884




777122489

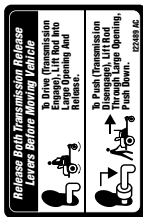

777S30284



777S33471

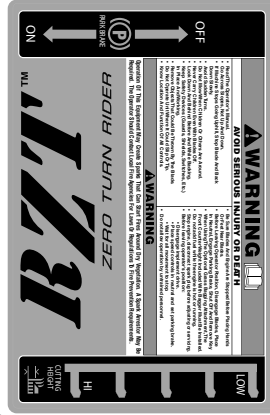


777D14204



777122886



777122885

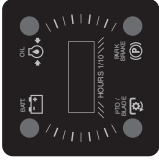

777122465



777D13929



 
777D11758



777S30503



777122282



777S33184



777122888



777D14068



777D14067



777D13924





To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
